

PD-4107

WIRING DIAGRAMS

FOR

GREYHOUND

COACHES

DIAGRAMS ARE BOUND IN
MD NUMBER SEQUENCE
AS LISTED BELOW

Directional Lamp Wiring Diagram—MD-177

Engine Control & Generator Wiring Diagram—MD-844

Moisture Ejector Valve Solenoid Wiring Diagram—MD-848

Step & Seat Lamp Wiring Diagram—MD-981

Coach Lighting Wiring Diagram—MD-992

Hour Meter Wiring Diagram—MD-1119

Heating and Air Conditioning Wiring Diagram—MD-2154

Alarm and Signal Wiring Diagram—MD-2370

Argo Tachograph Wiring Diagram—MD-95735


Fire Alarm Wiring Diagram—MD-95742

Heating and Air Conditioning Wiring Diagram—MD-98247-C


Public Address System Wiring Diagram—MD-98921

Speakers Wiring Diagram—MD-99963

GMC TRUCK & COACH DIVISION
GENERAL MOTORS CORPORATION
Pontiac, Michigan

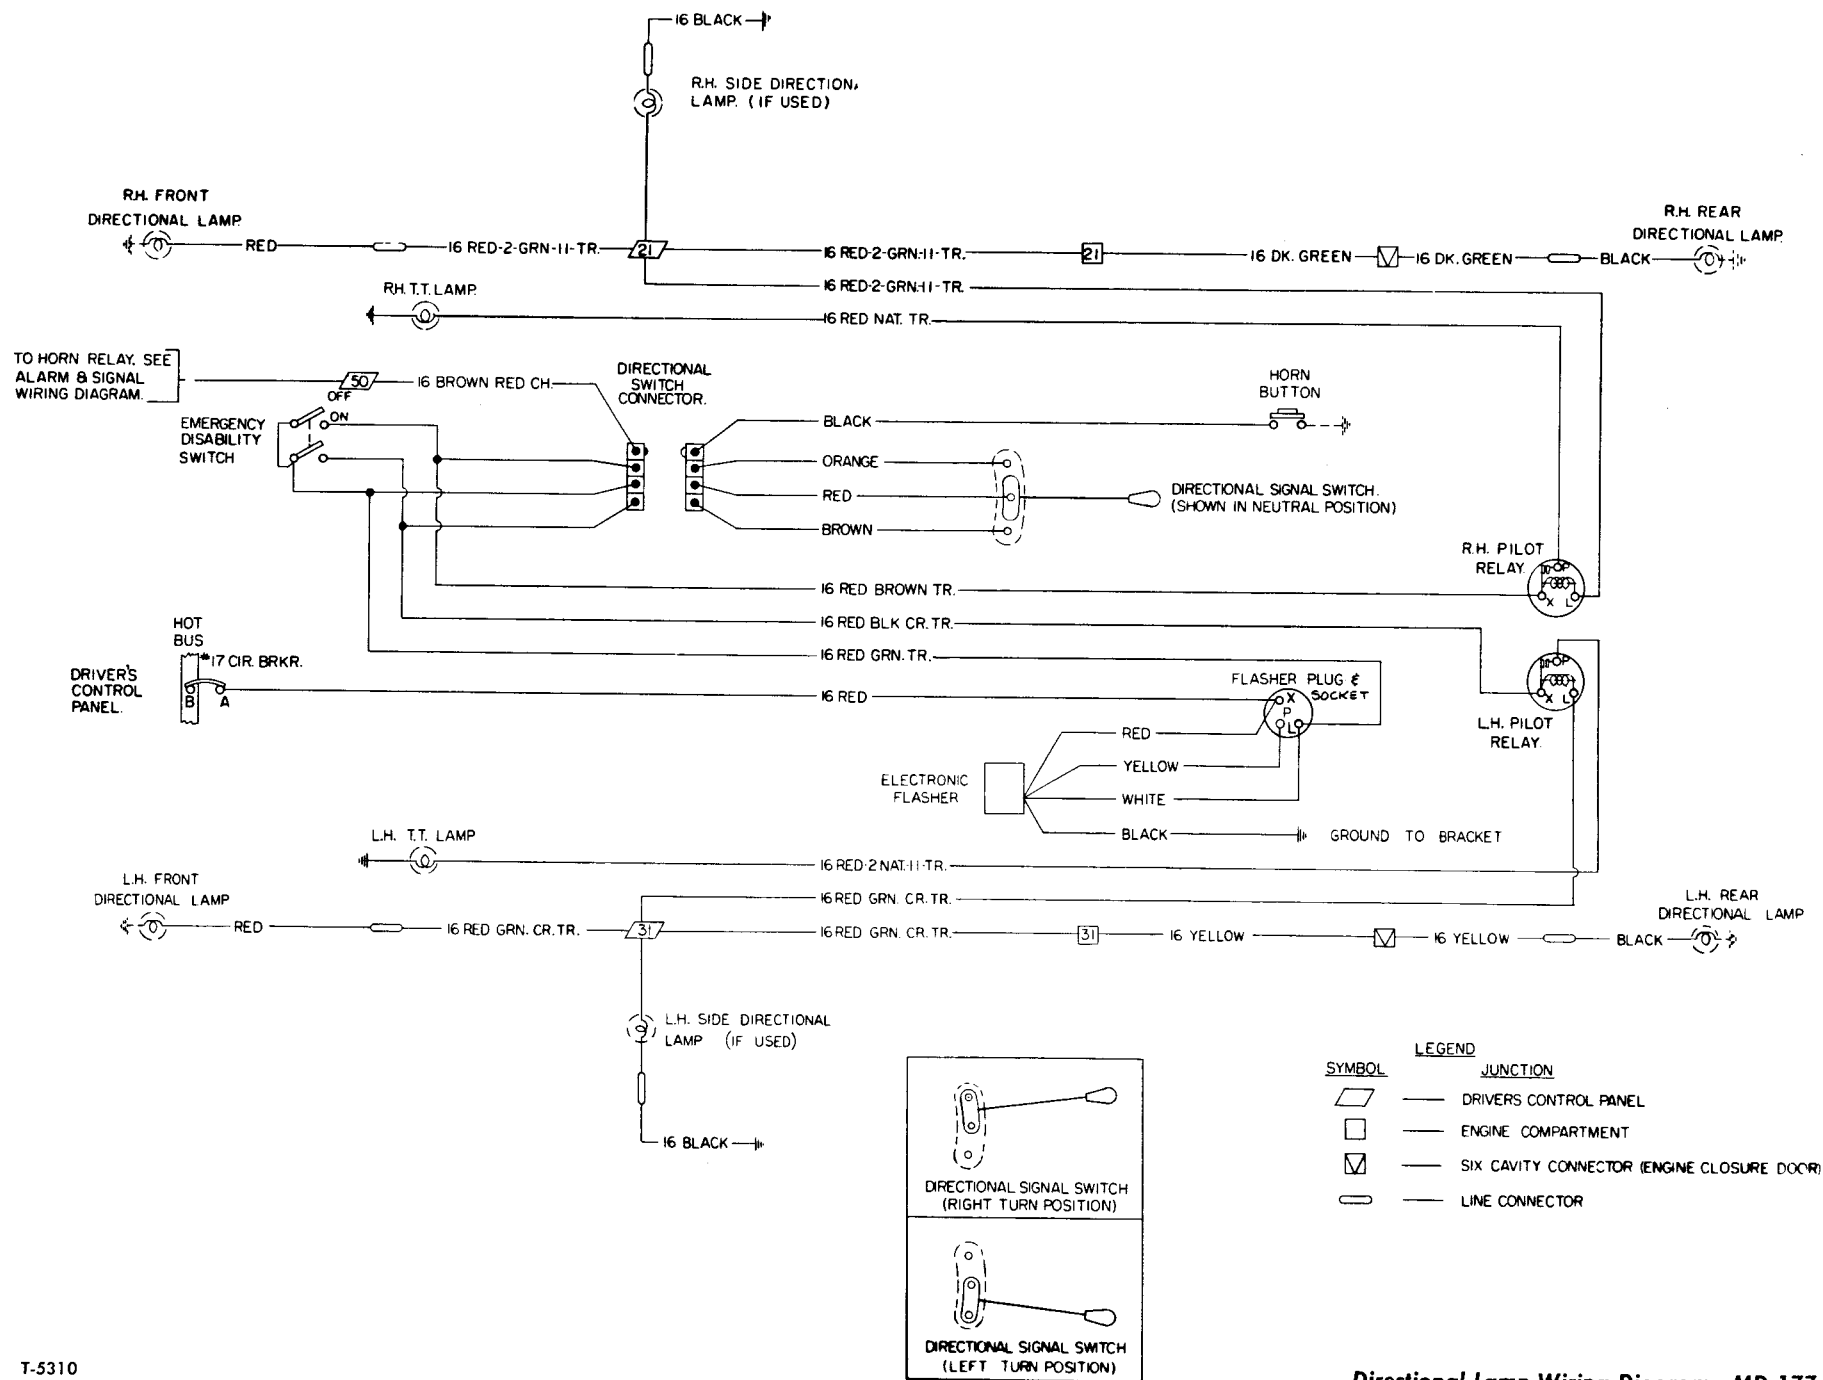





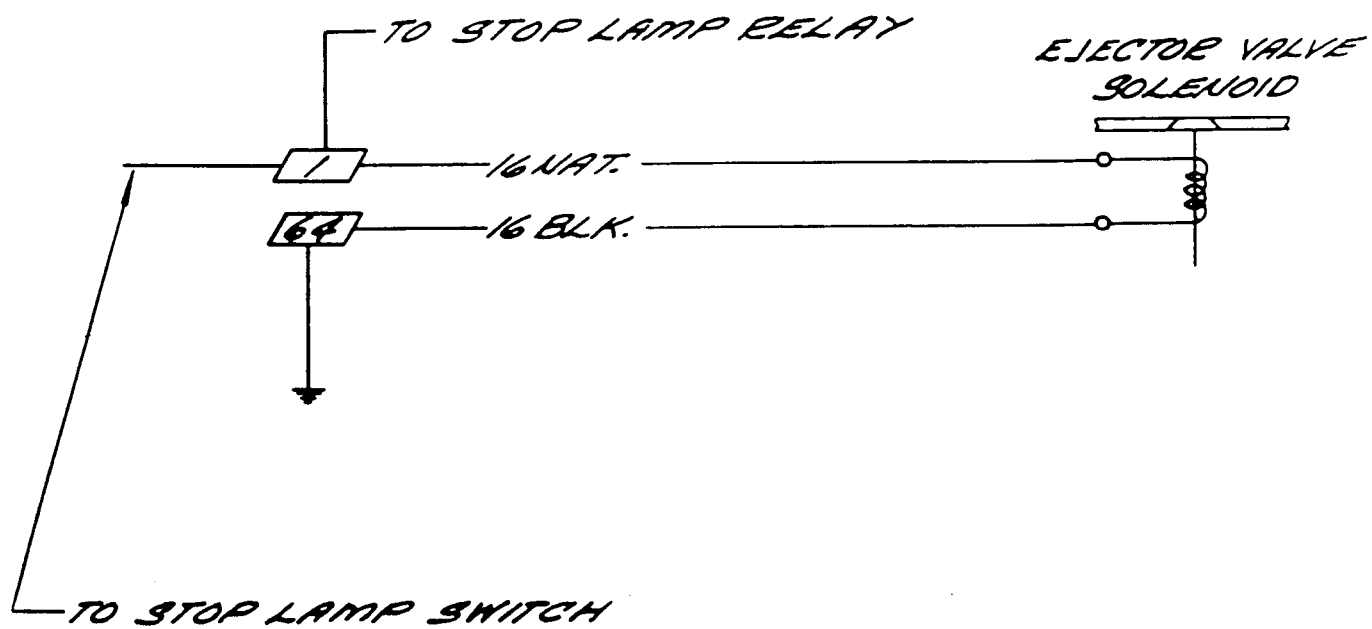

T-5312

Moisture Ejector Valve Solenoid Wiring Diagram—MD-848

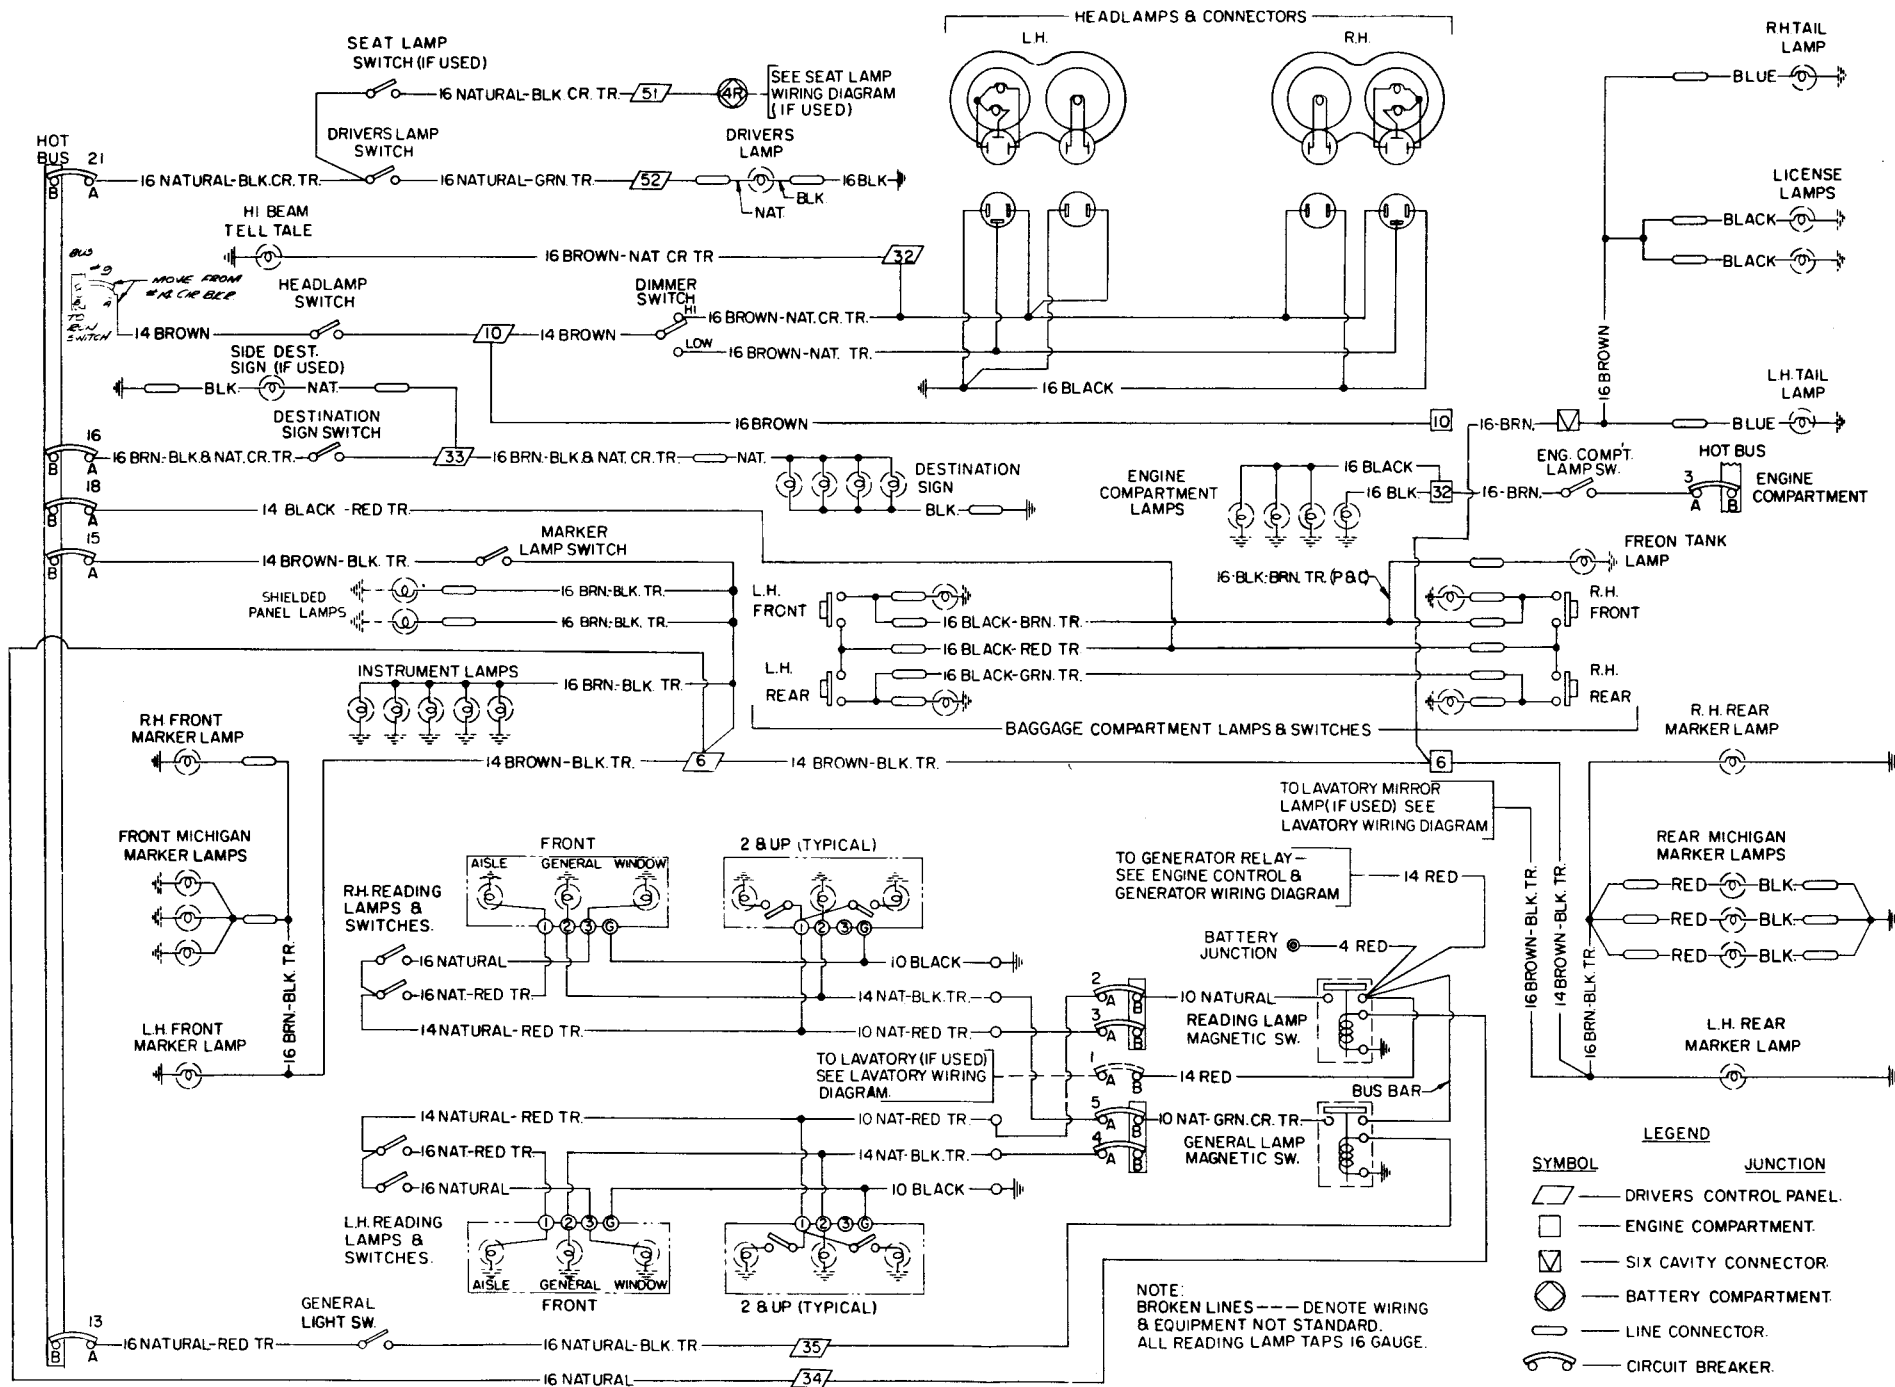


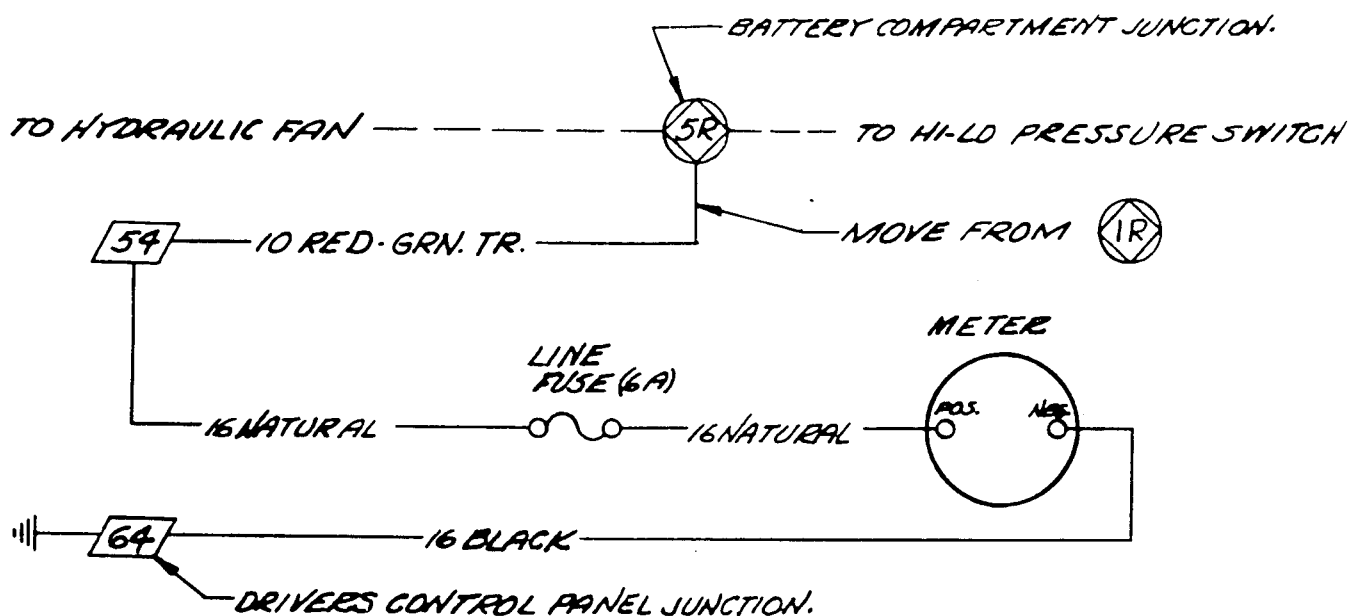


NOTE:
 FOR ADDITIONAL INFORMATION SEE
 HEATING & AIR CONDITIONING WIRING DIAGRAM.

T-5315

Hour Meter Wiring Diagram—MD-1119

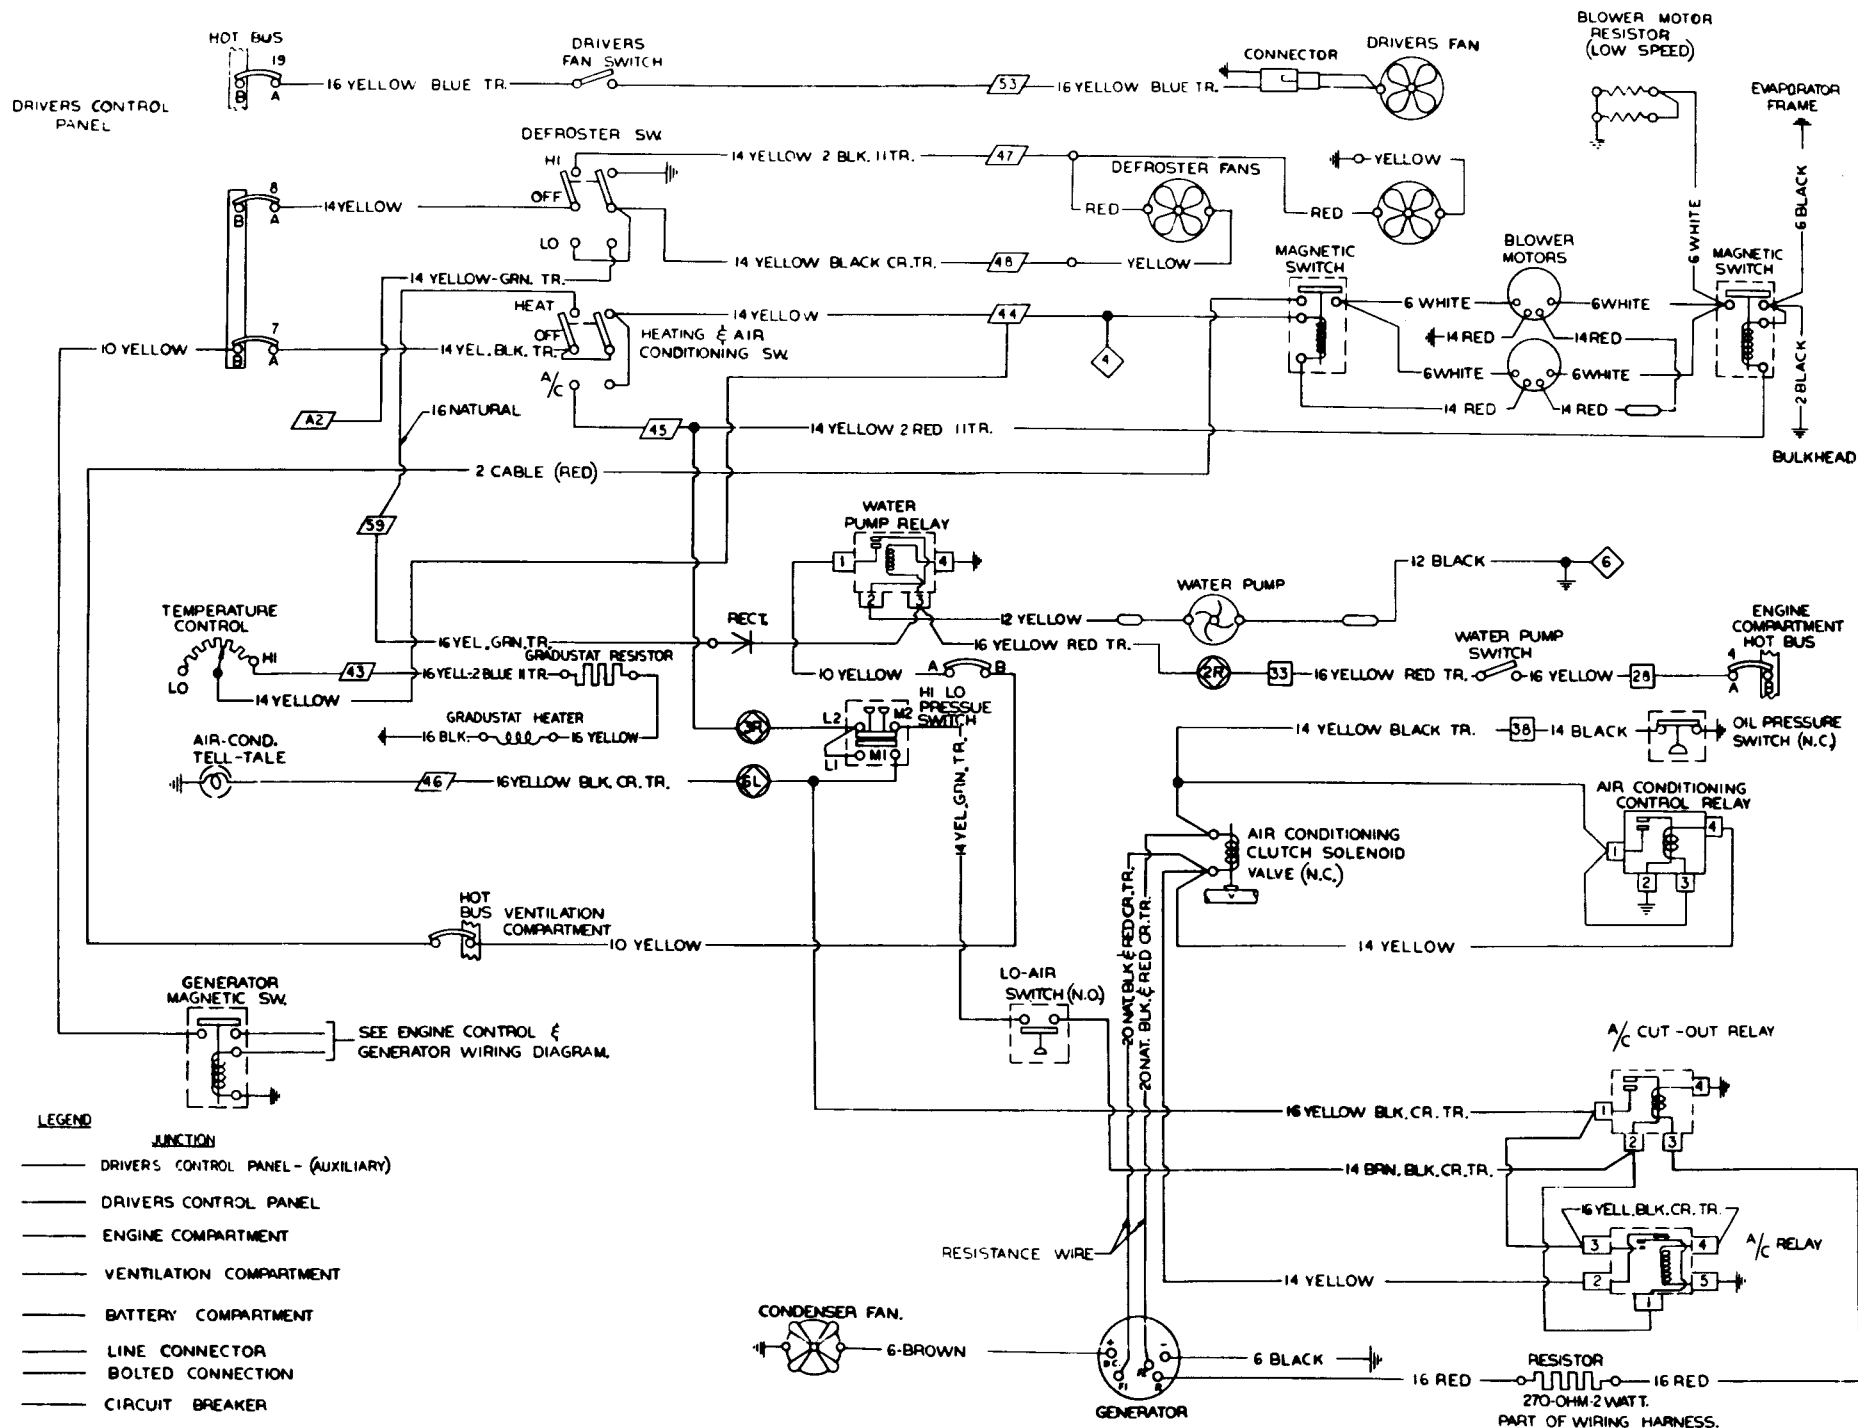

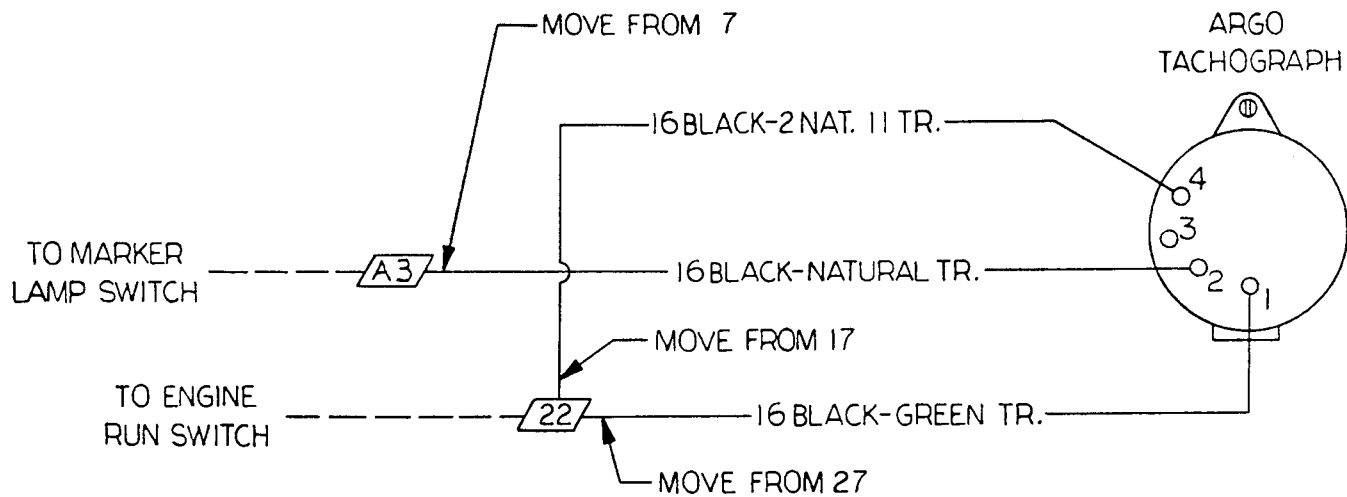

LEGEND

SYMBOL

JUNCTION



DRIVERS CONTROL PANEL




BROKEN LINES DENOTE STANDARD WIRING




T-5318

Argo Tachograph Wiring Diagram—MD-95735

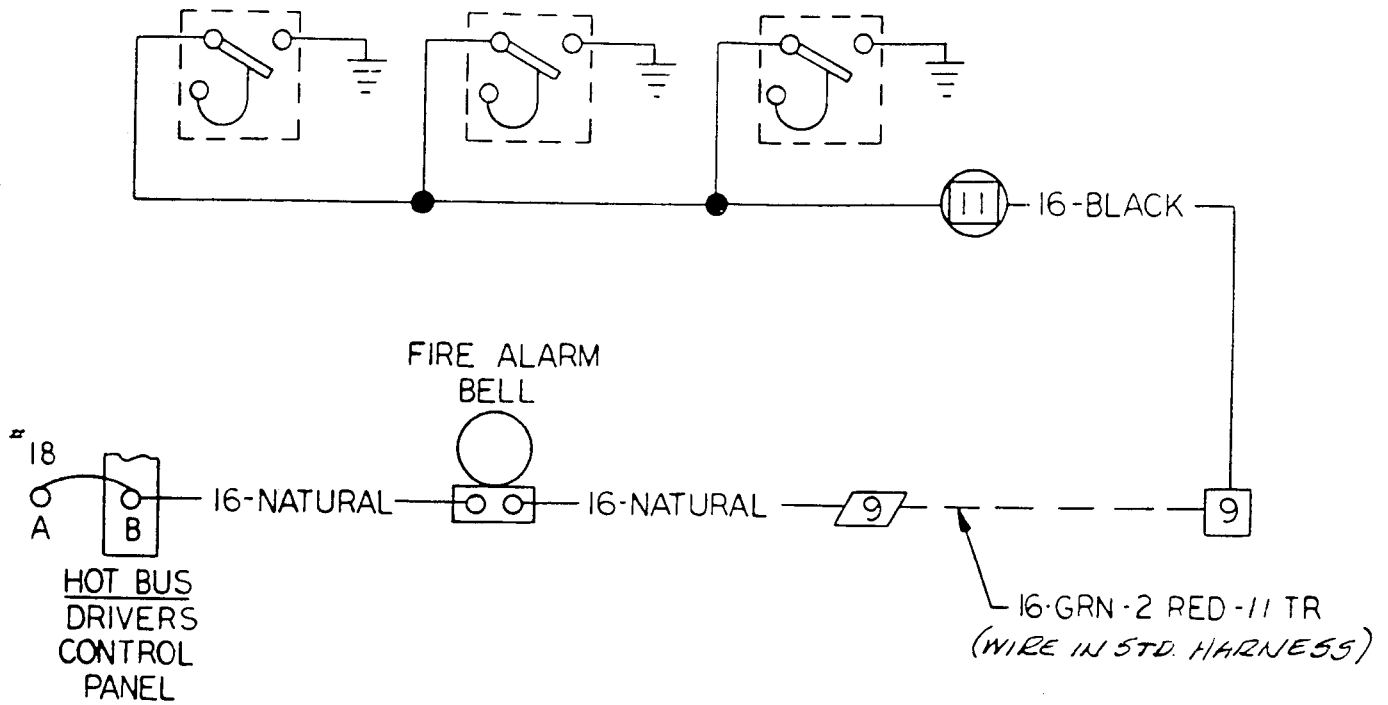FIRE DETECTOR UNITS





LEGEND


<u>SYMBOL</u>	<u>JUNCTION</u>
	ENGINE COMPARTMENT
	DRIVERS CONTROL PANEL
	ENGINE HARNESS CONNECTOR

T-5319

Fire Alarm Wiring Diagram—MD-95742

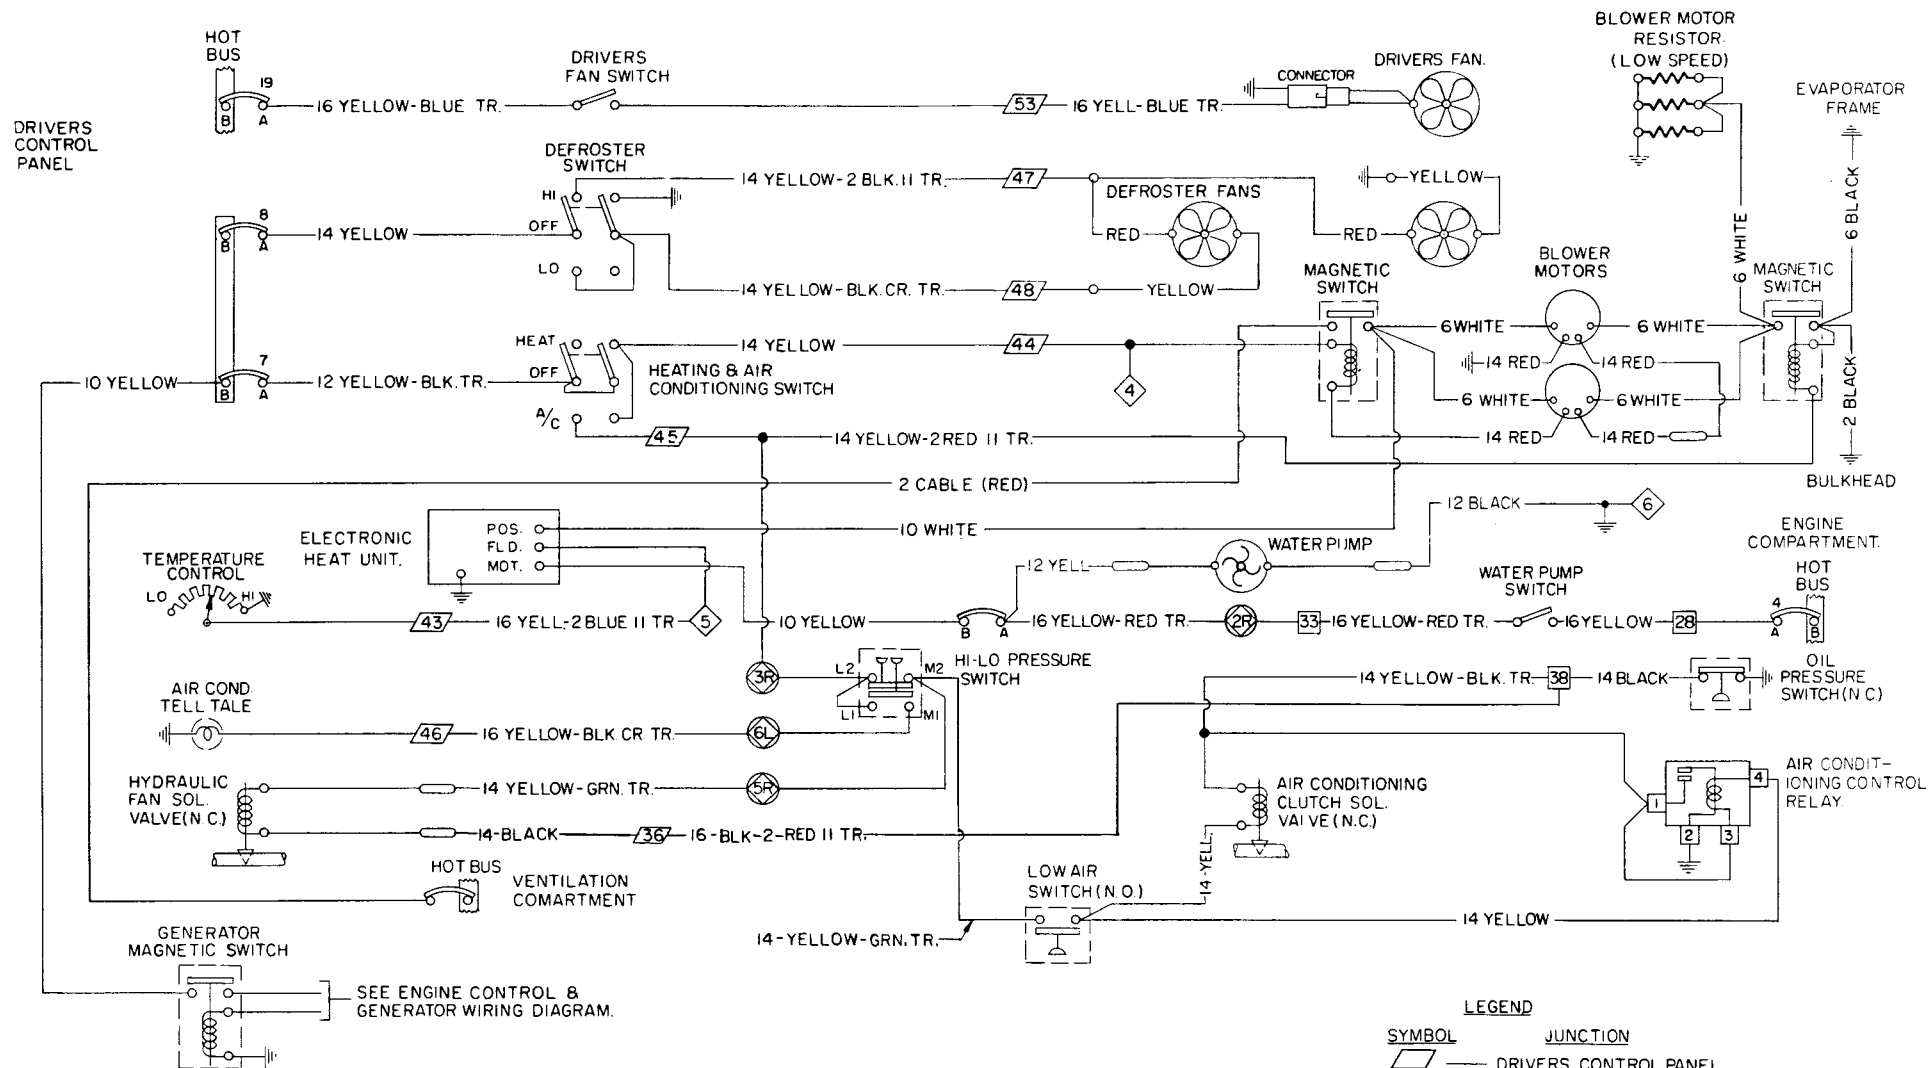

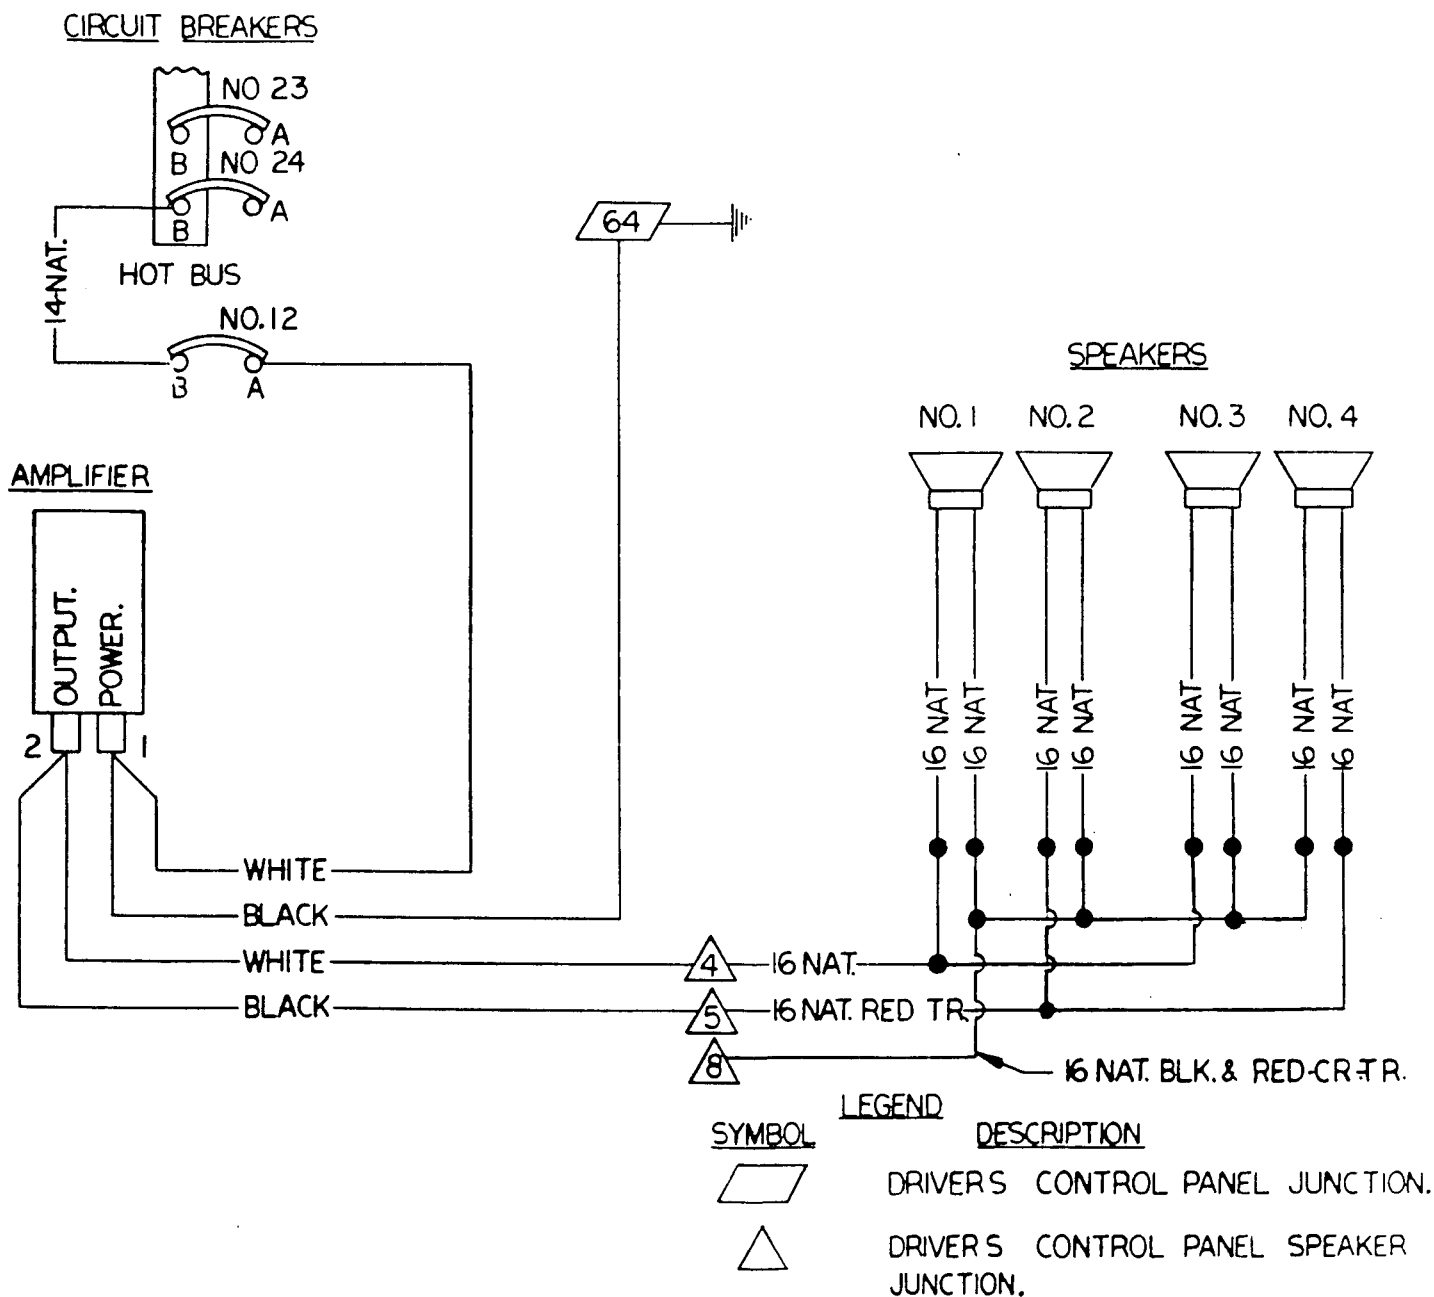

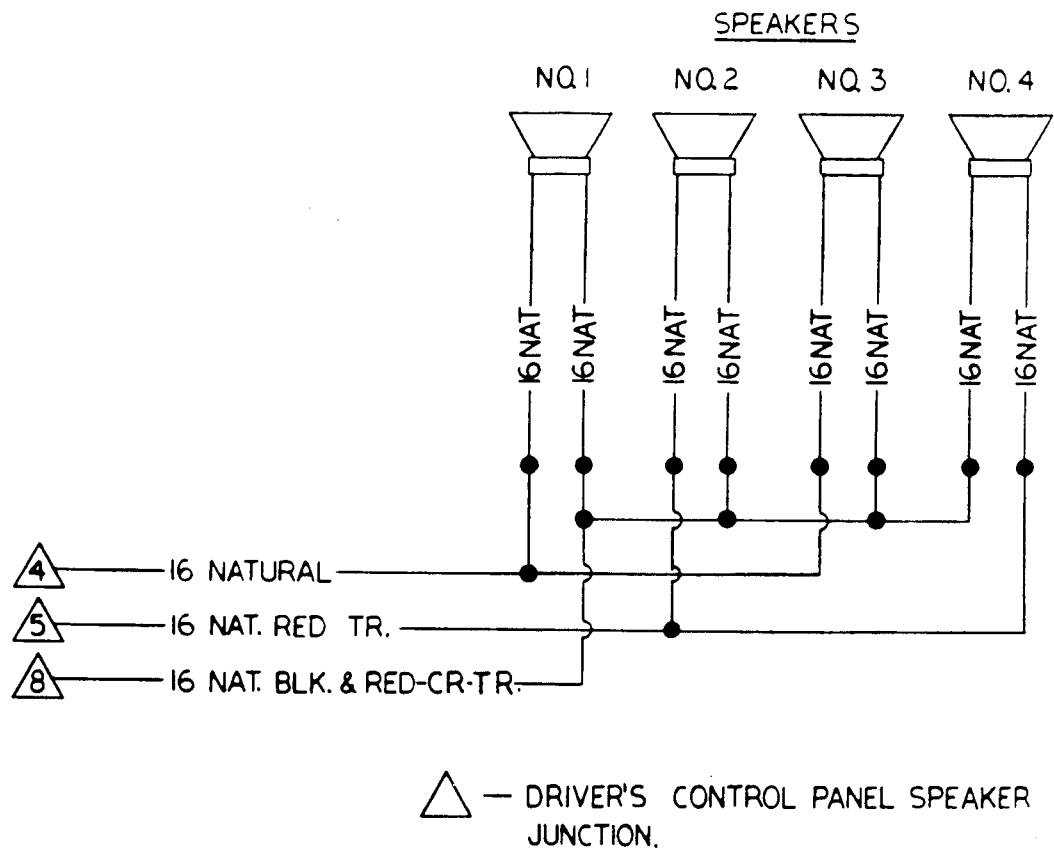


T-5322

Speakers Wiring Diagram—MD-99963

*SPEEDOMETER
HEAD*

*SPEEDOMETER
SENDING UNIT*

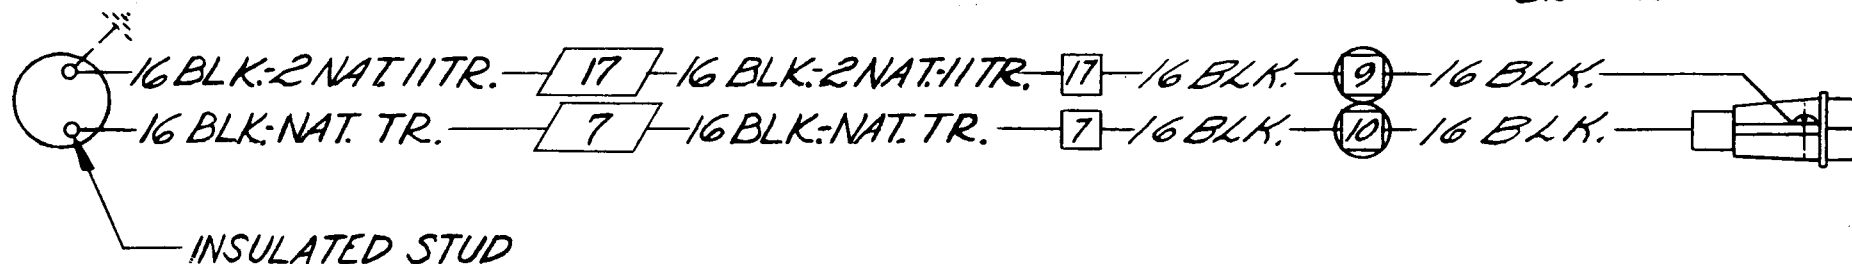

LEGEND

SYMBOL


JUNCTION

[] — DRIVERS CONTROL PANEL

[] — ENGINE COMPARTMENT


[] — ENGINE HARNESS CONNECTOR

T-2896

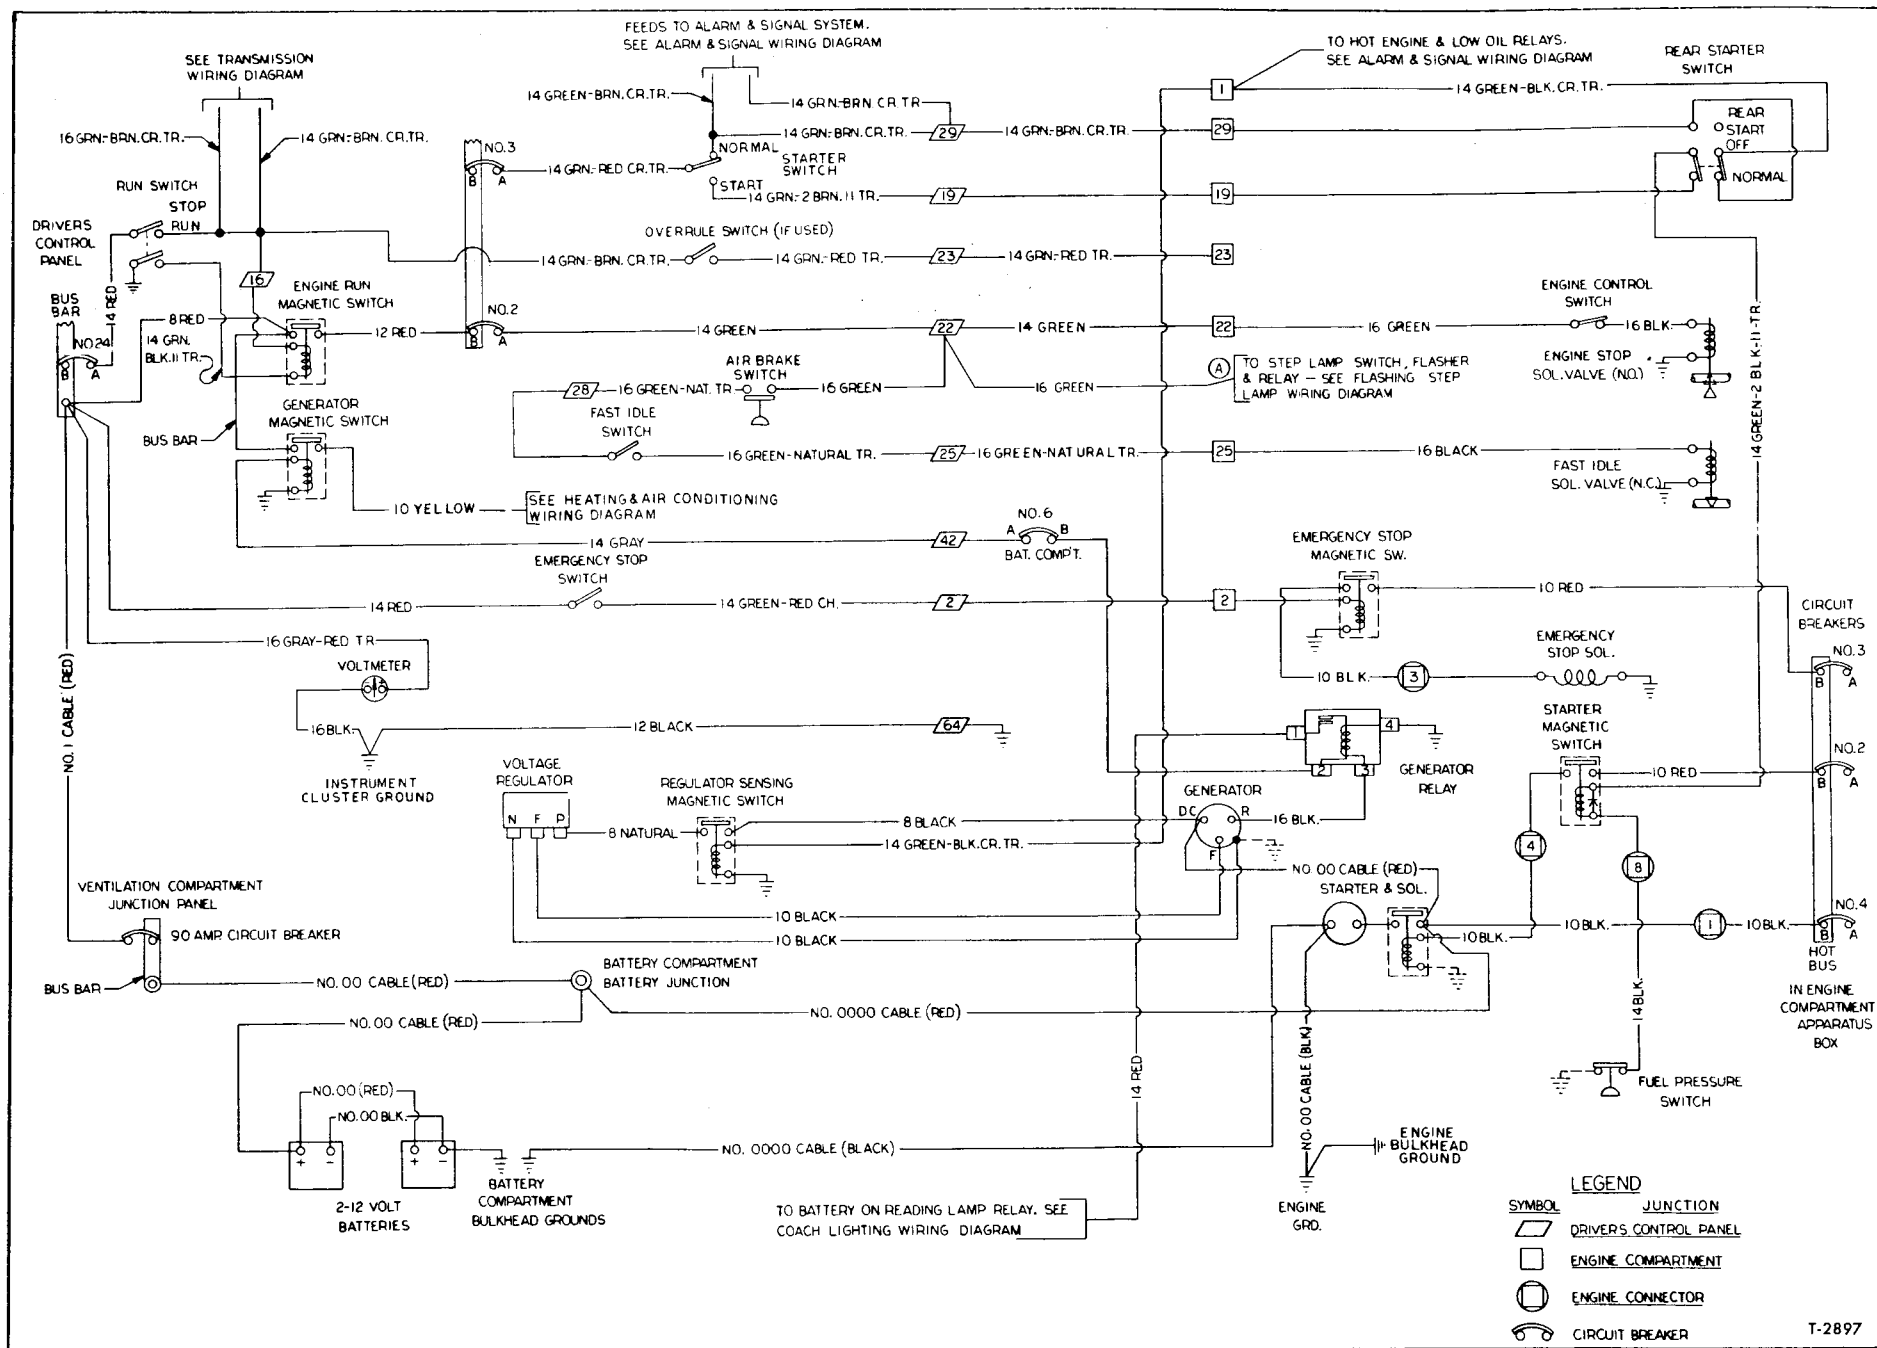

MD-97593A—Engine Control and Generator Wiring Diagram


MD-97593A

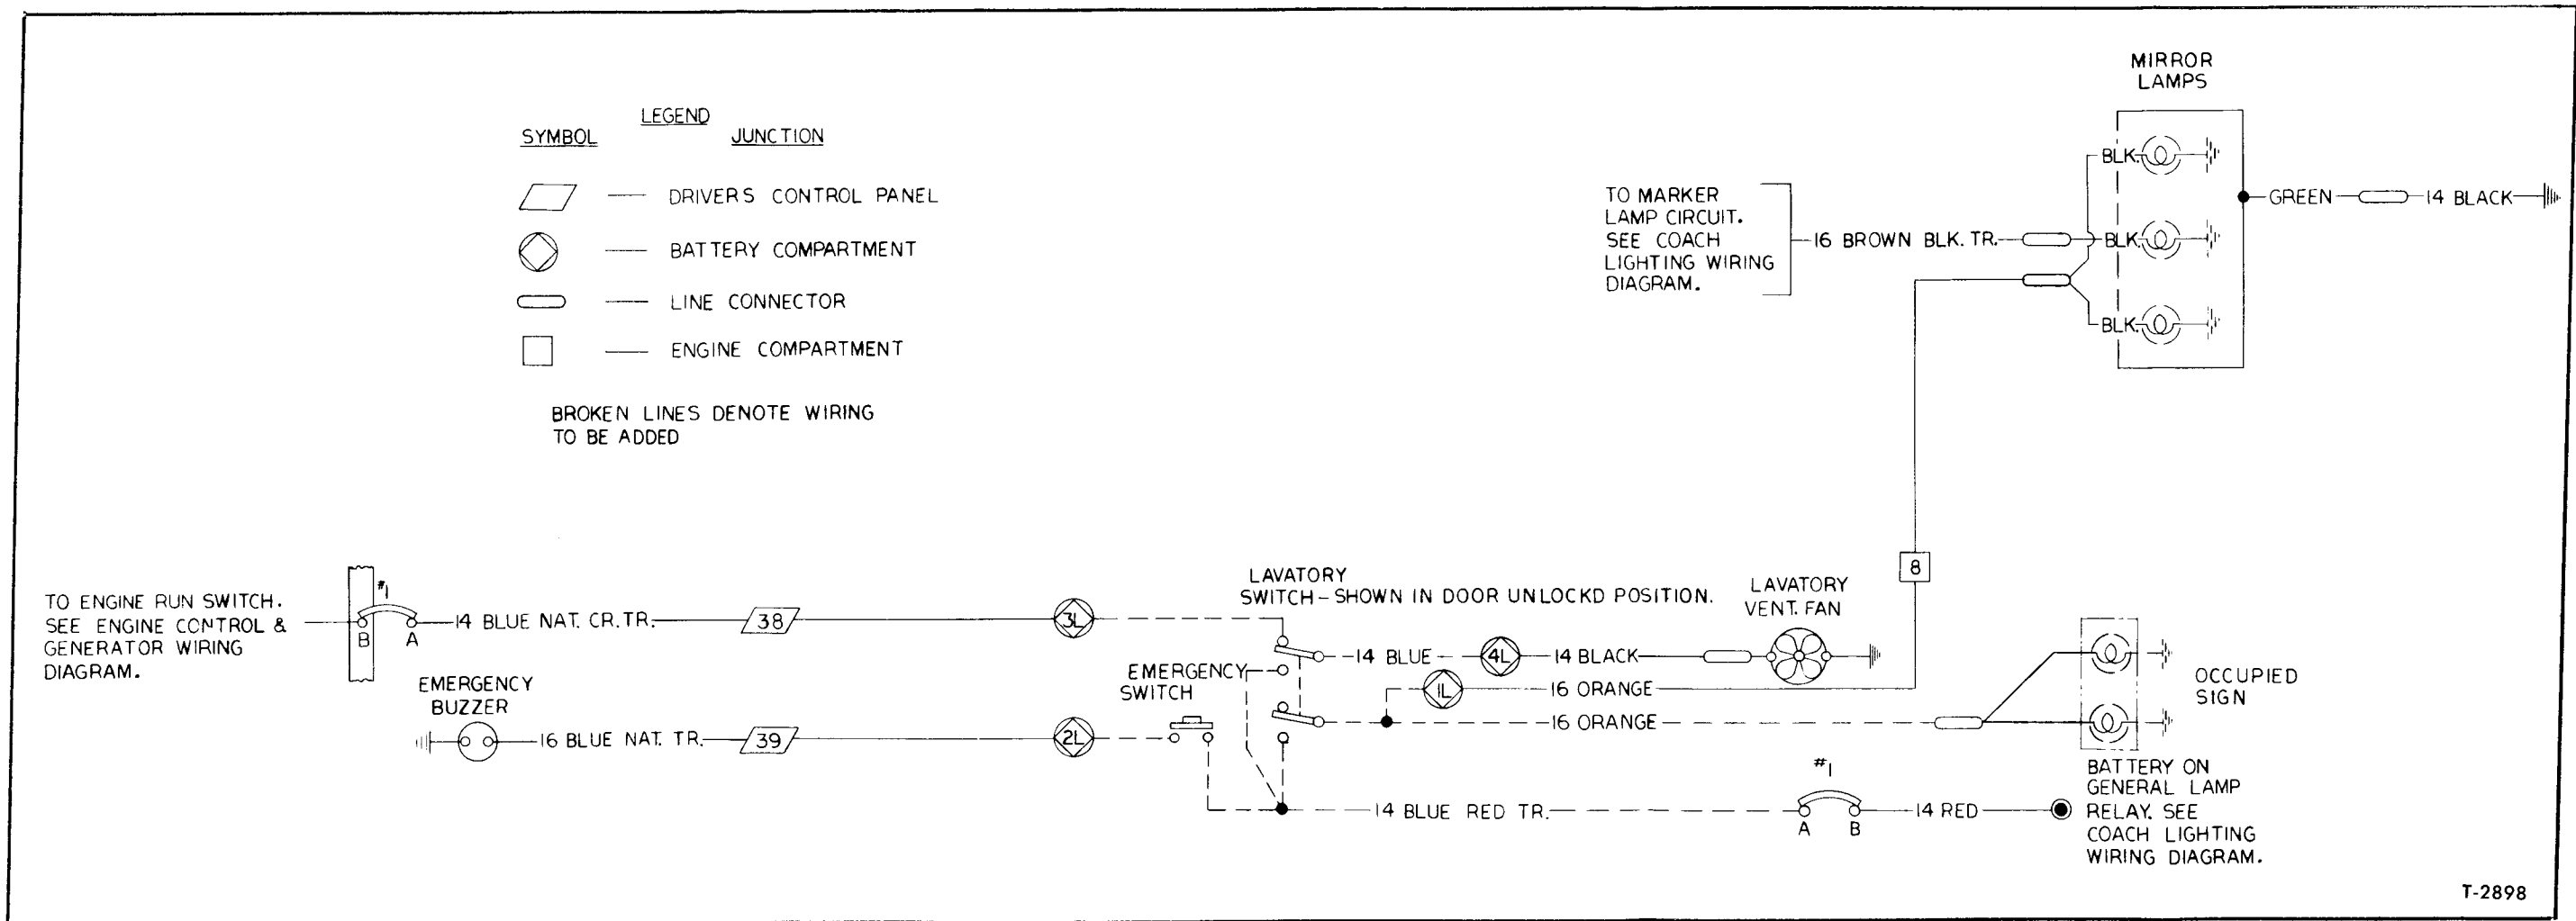



MD-97595—Lavatory Wiring Diagram

T-2898

MD-97595

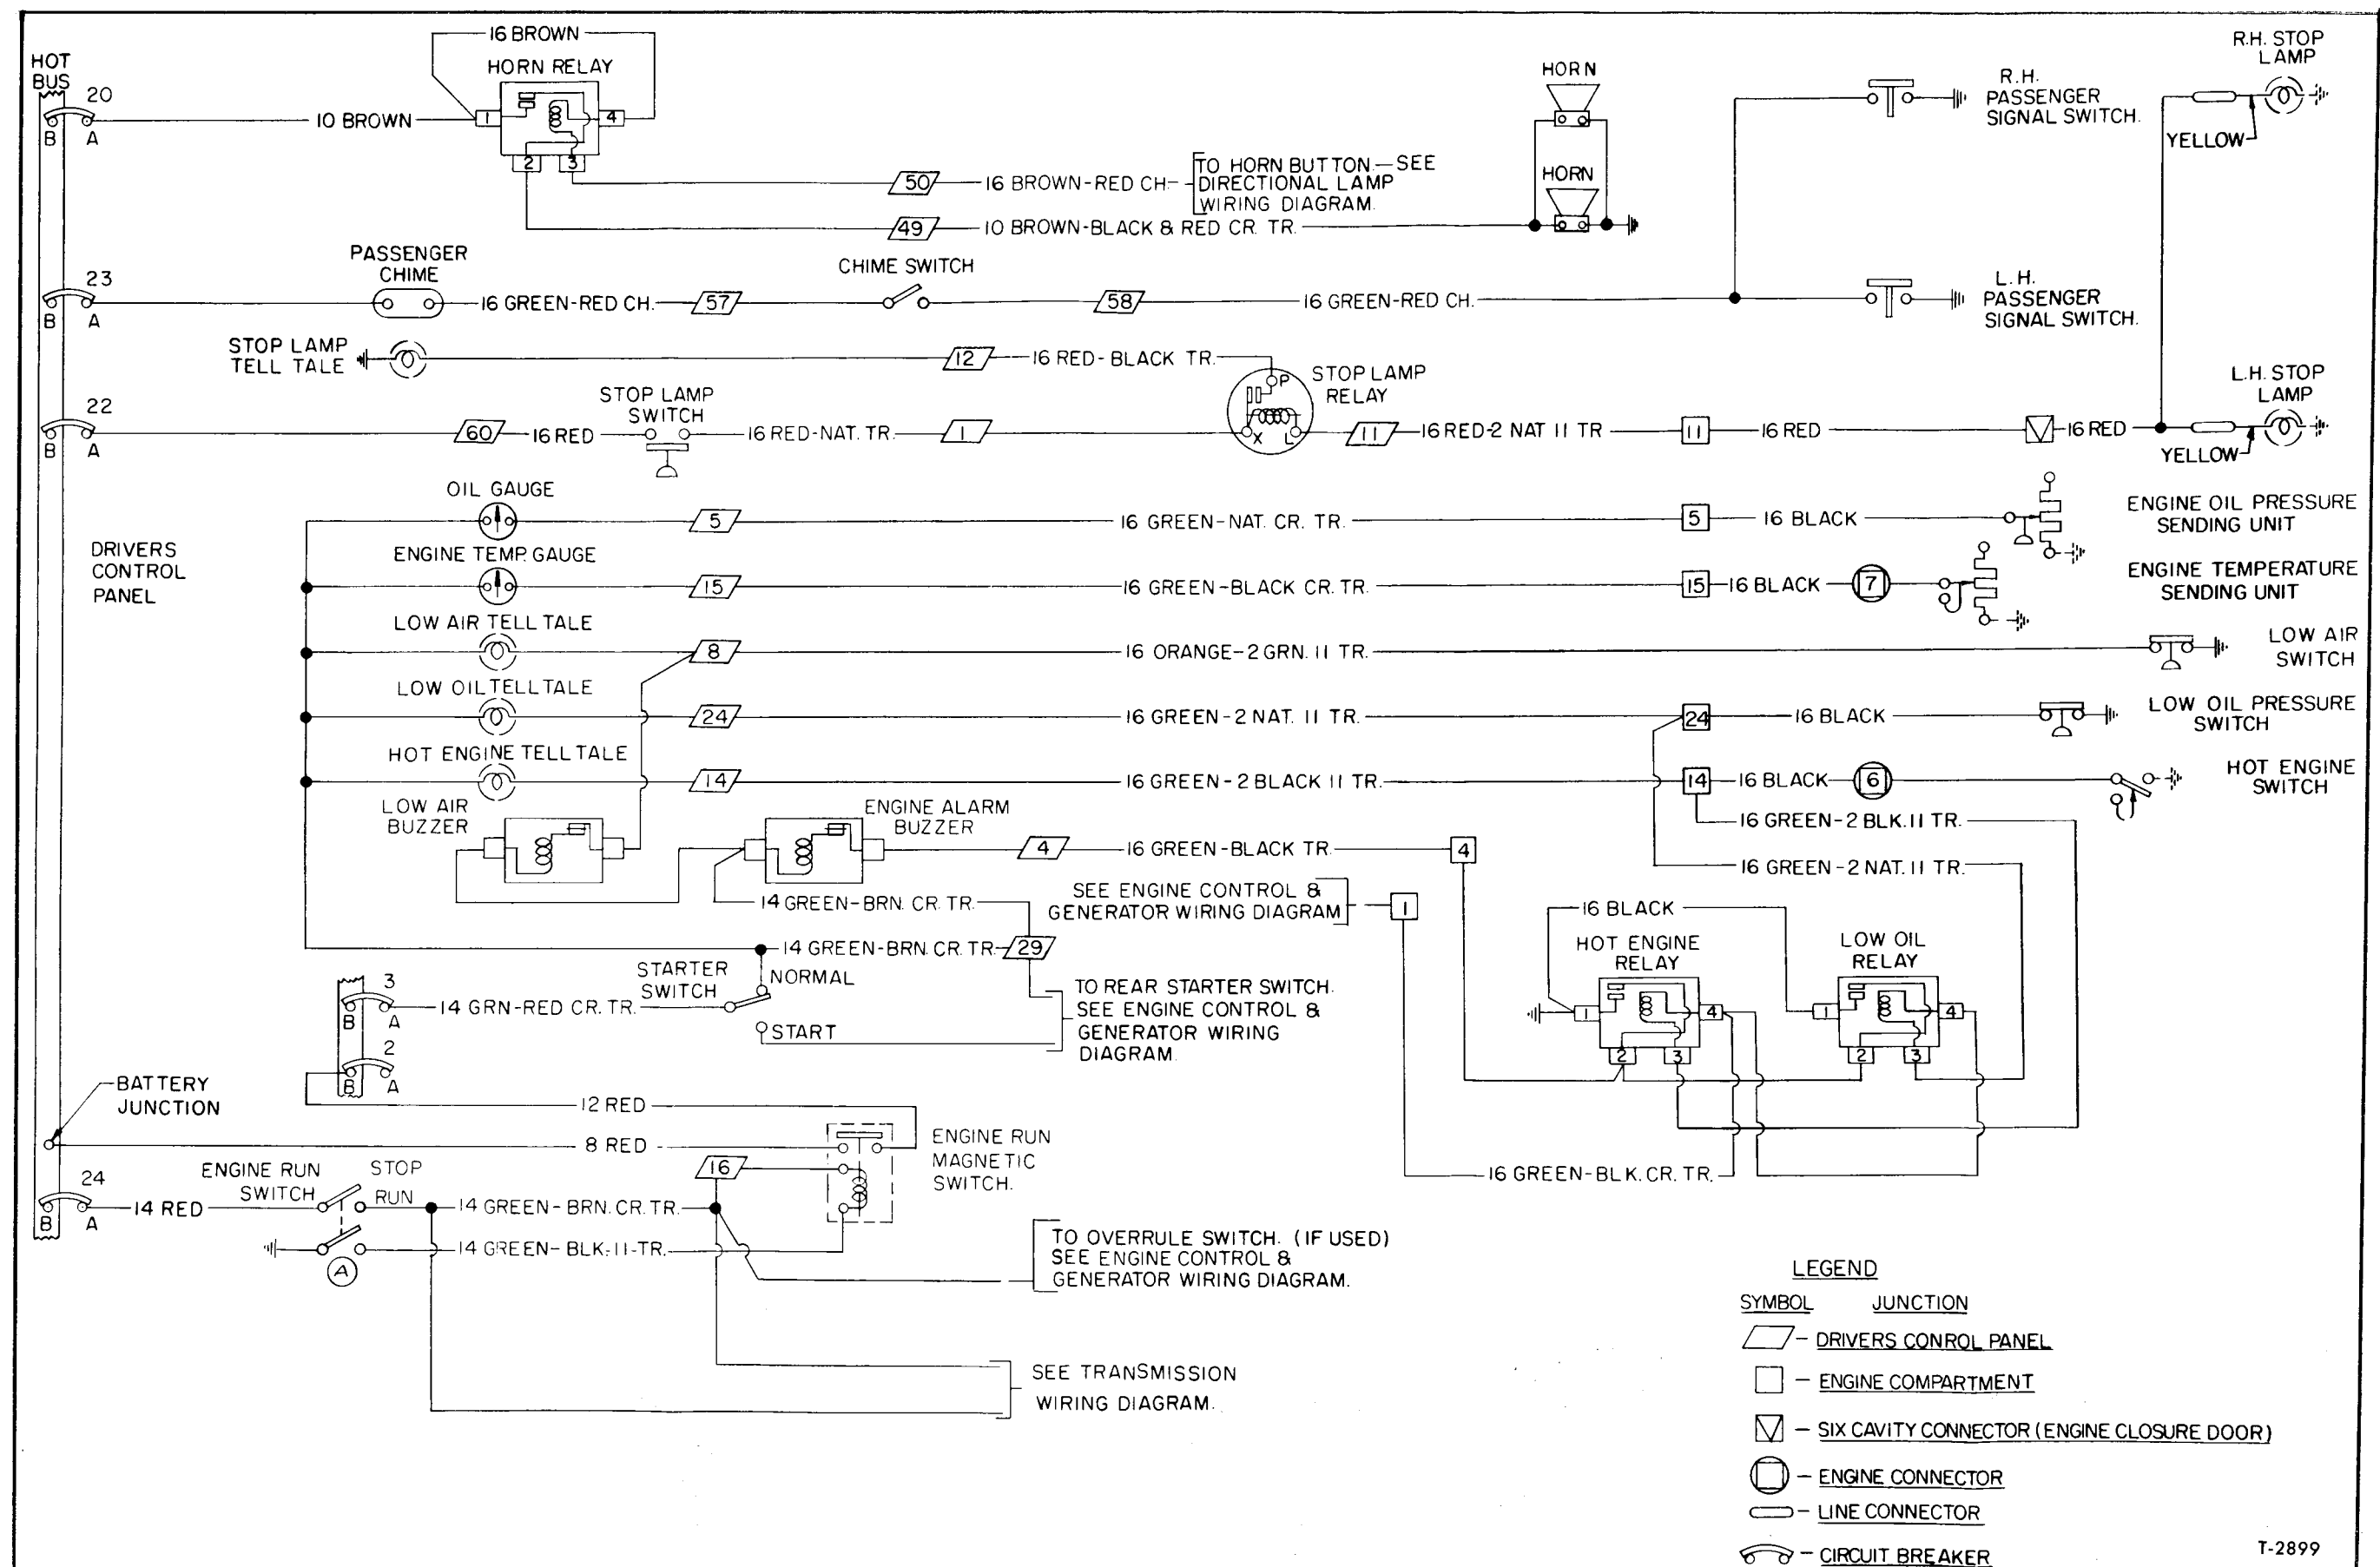

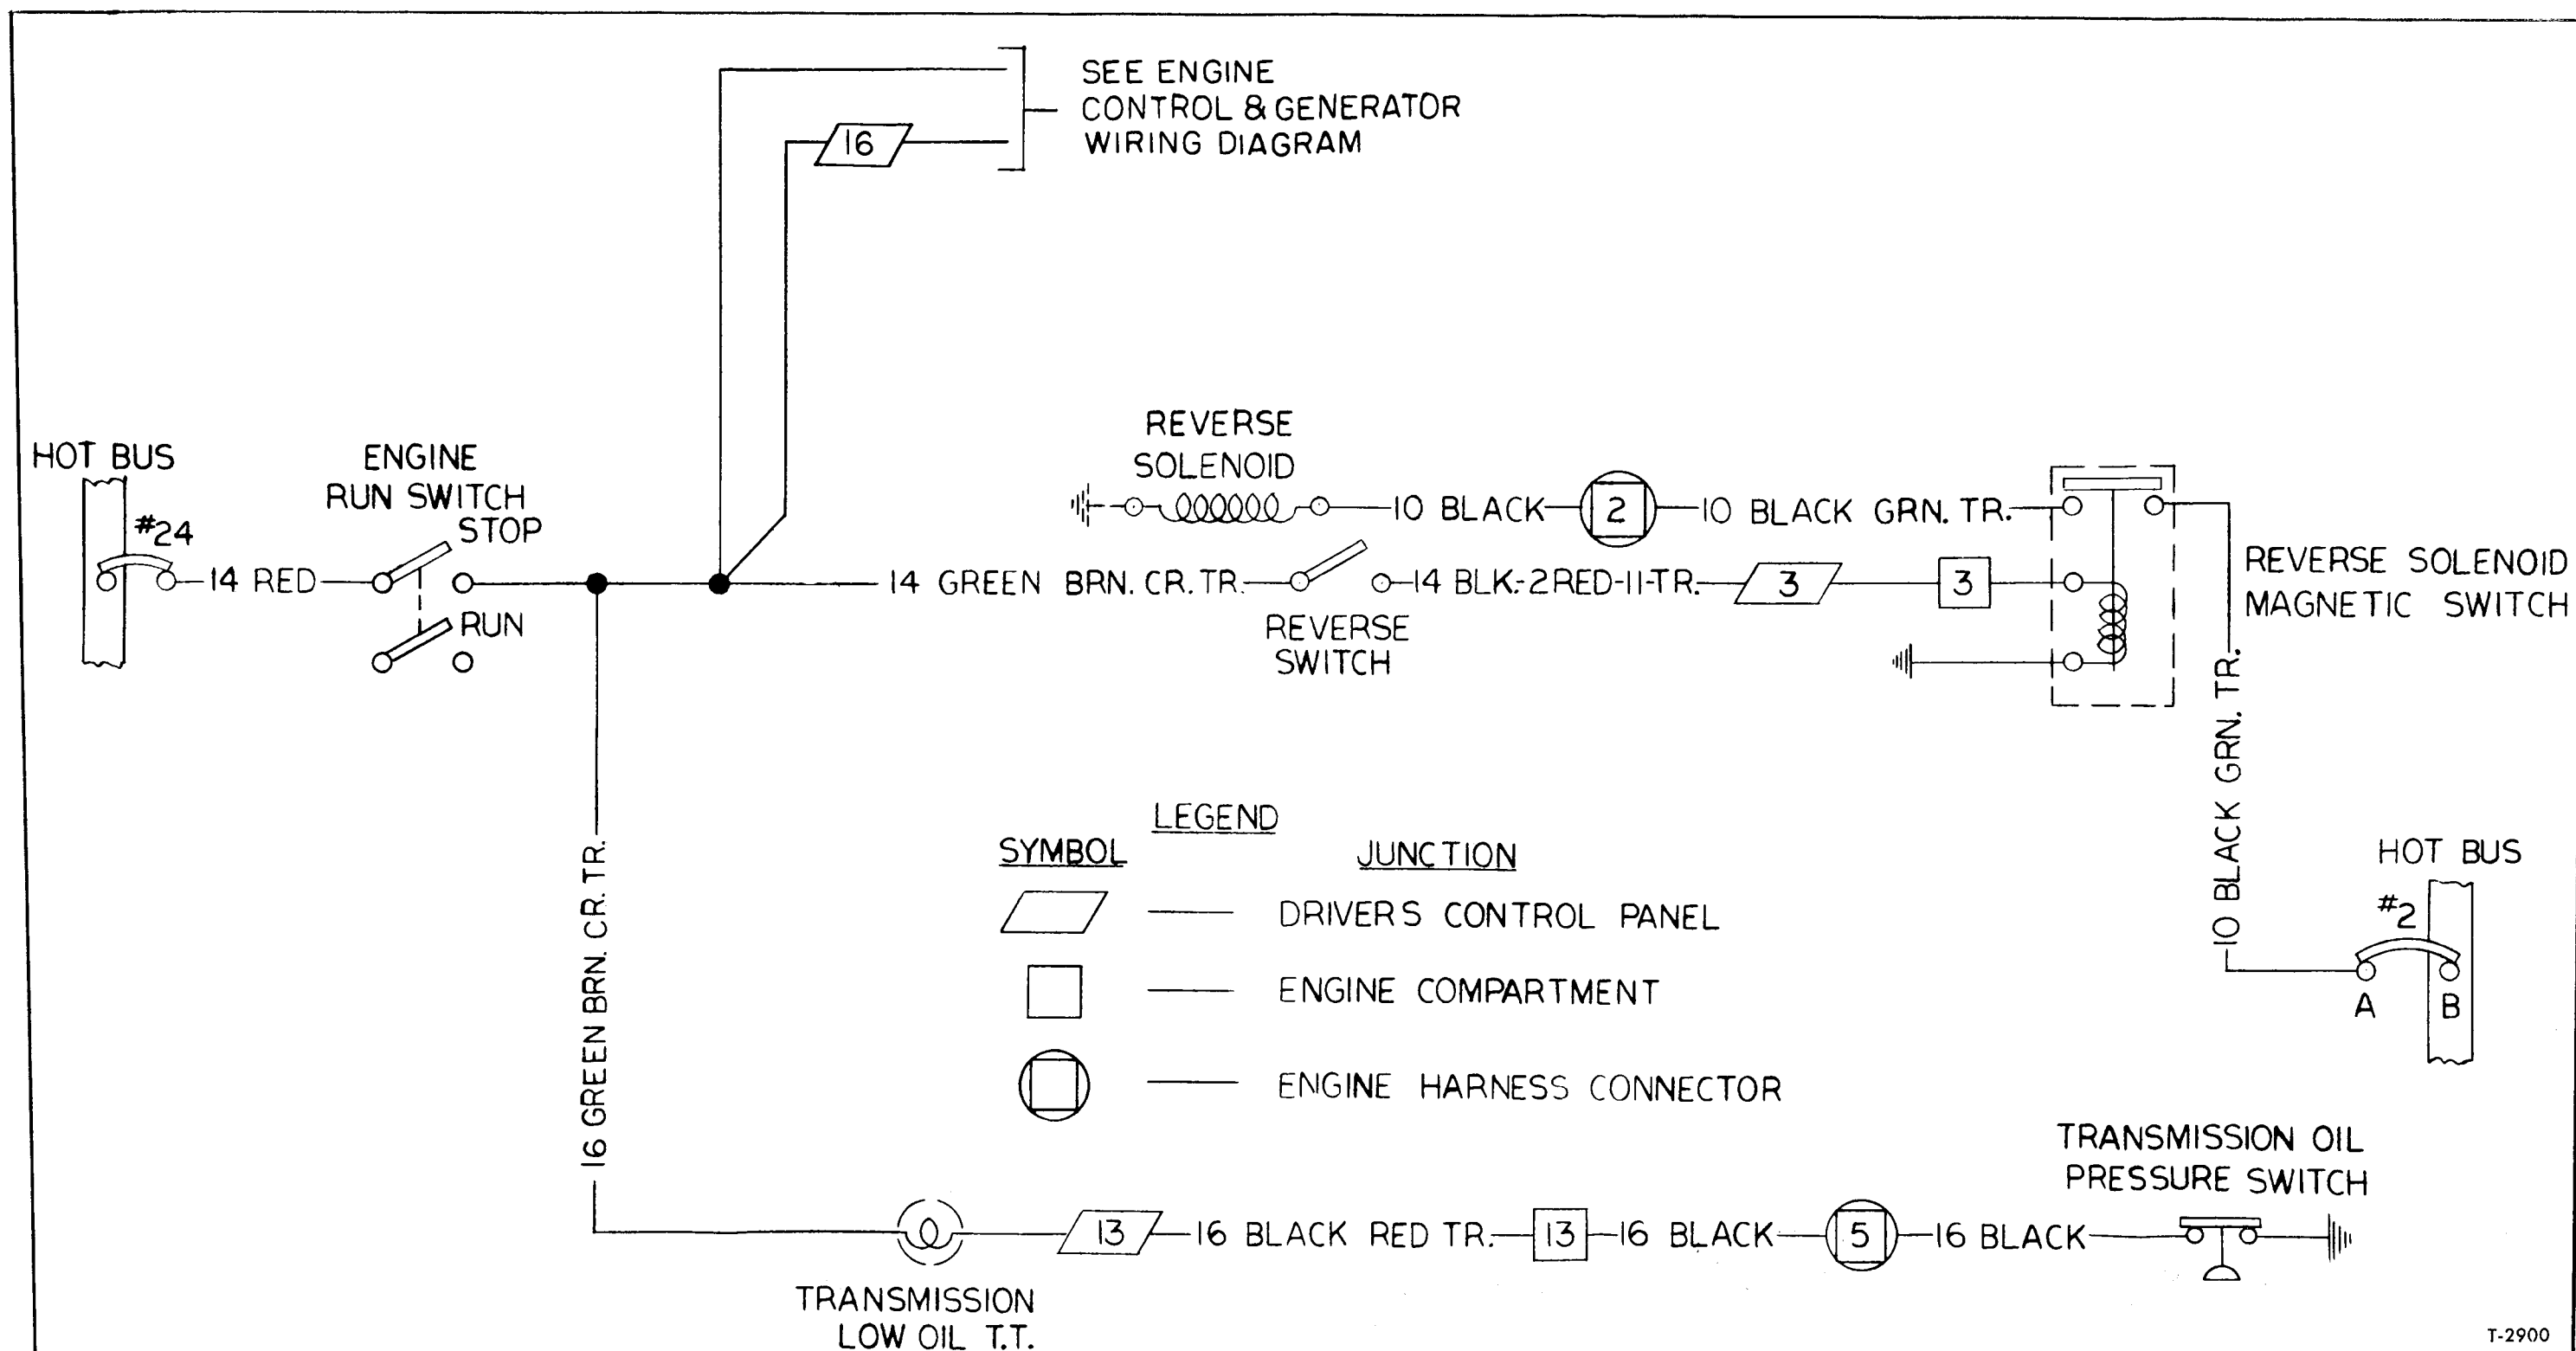

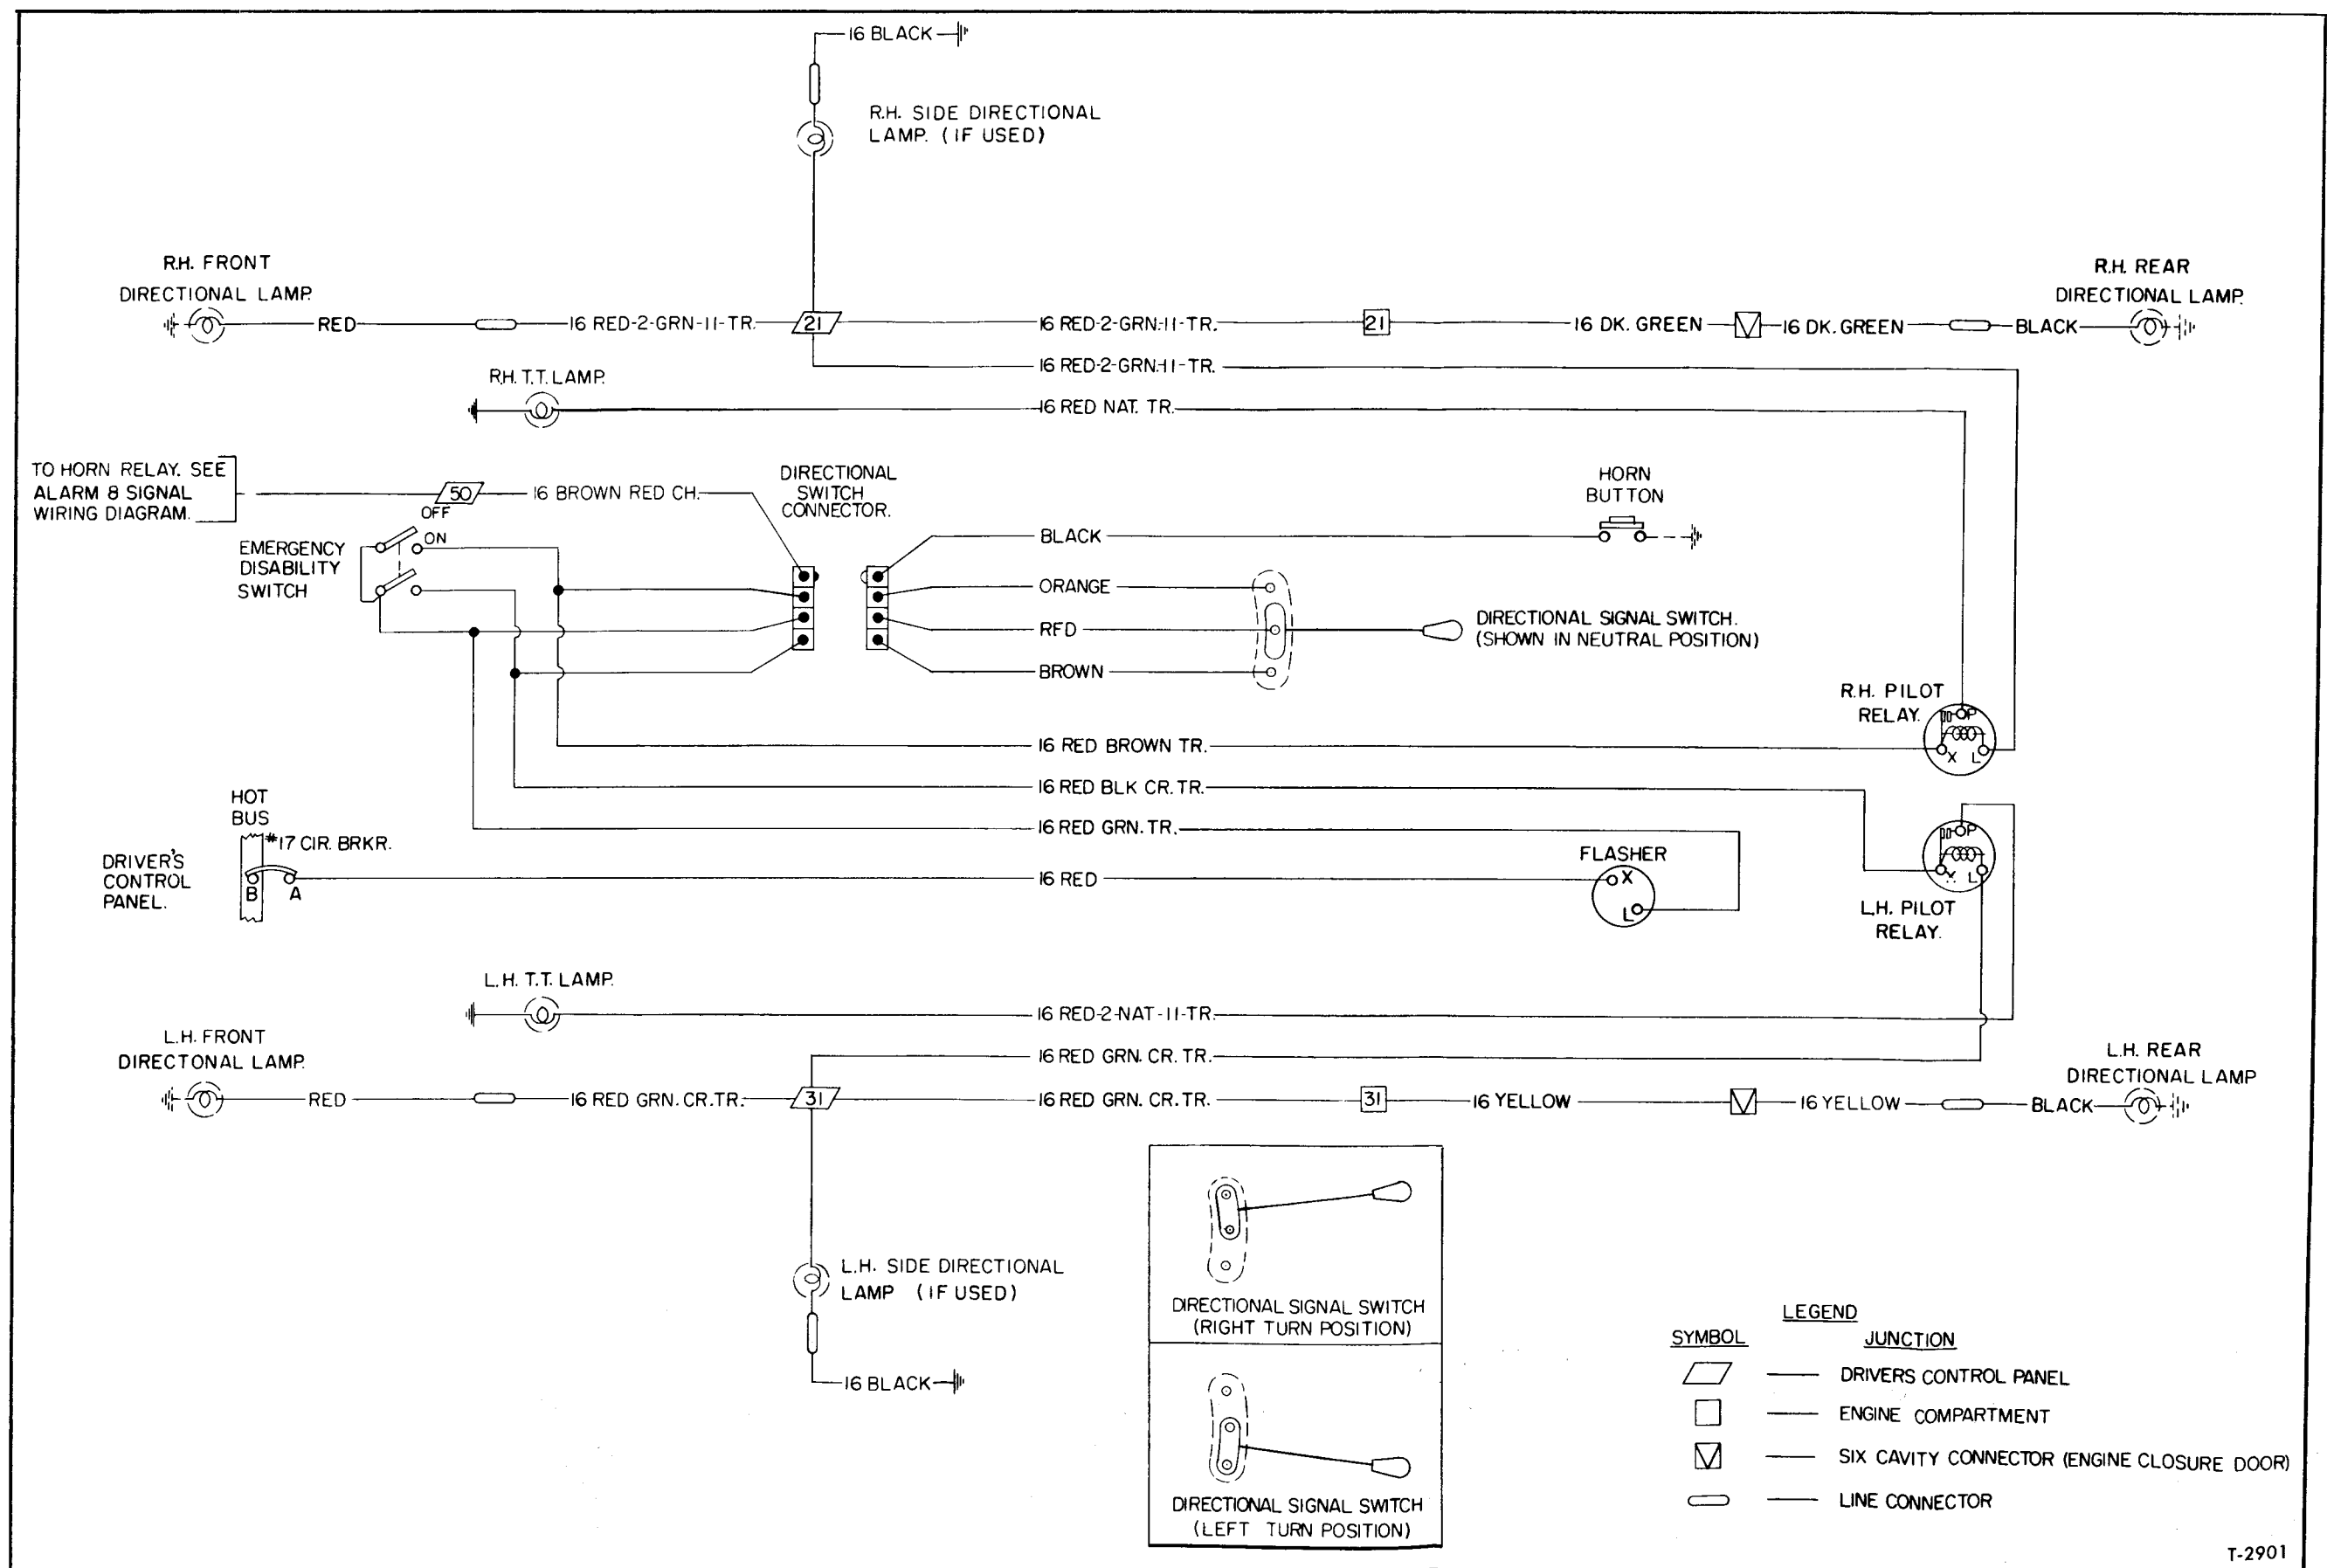



LEGEND	
SYMBOL	JUNCTION
	DRIVERS CONTROL PANEL
	ENGINE COMPARTMENT
	SIX CAVITY CONNECTOR (ENGINE CLOSURE DOOR)
	LINE CONNECTOR

MD-97599—Directional Light Wiring Diagram

T-2901

MD-97599

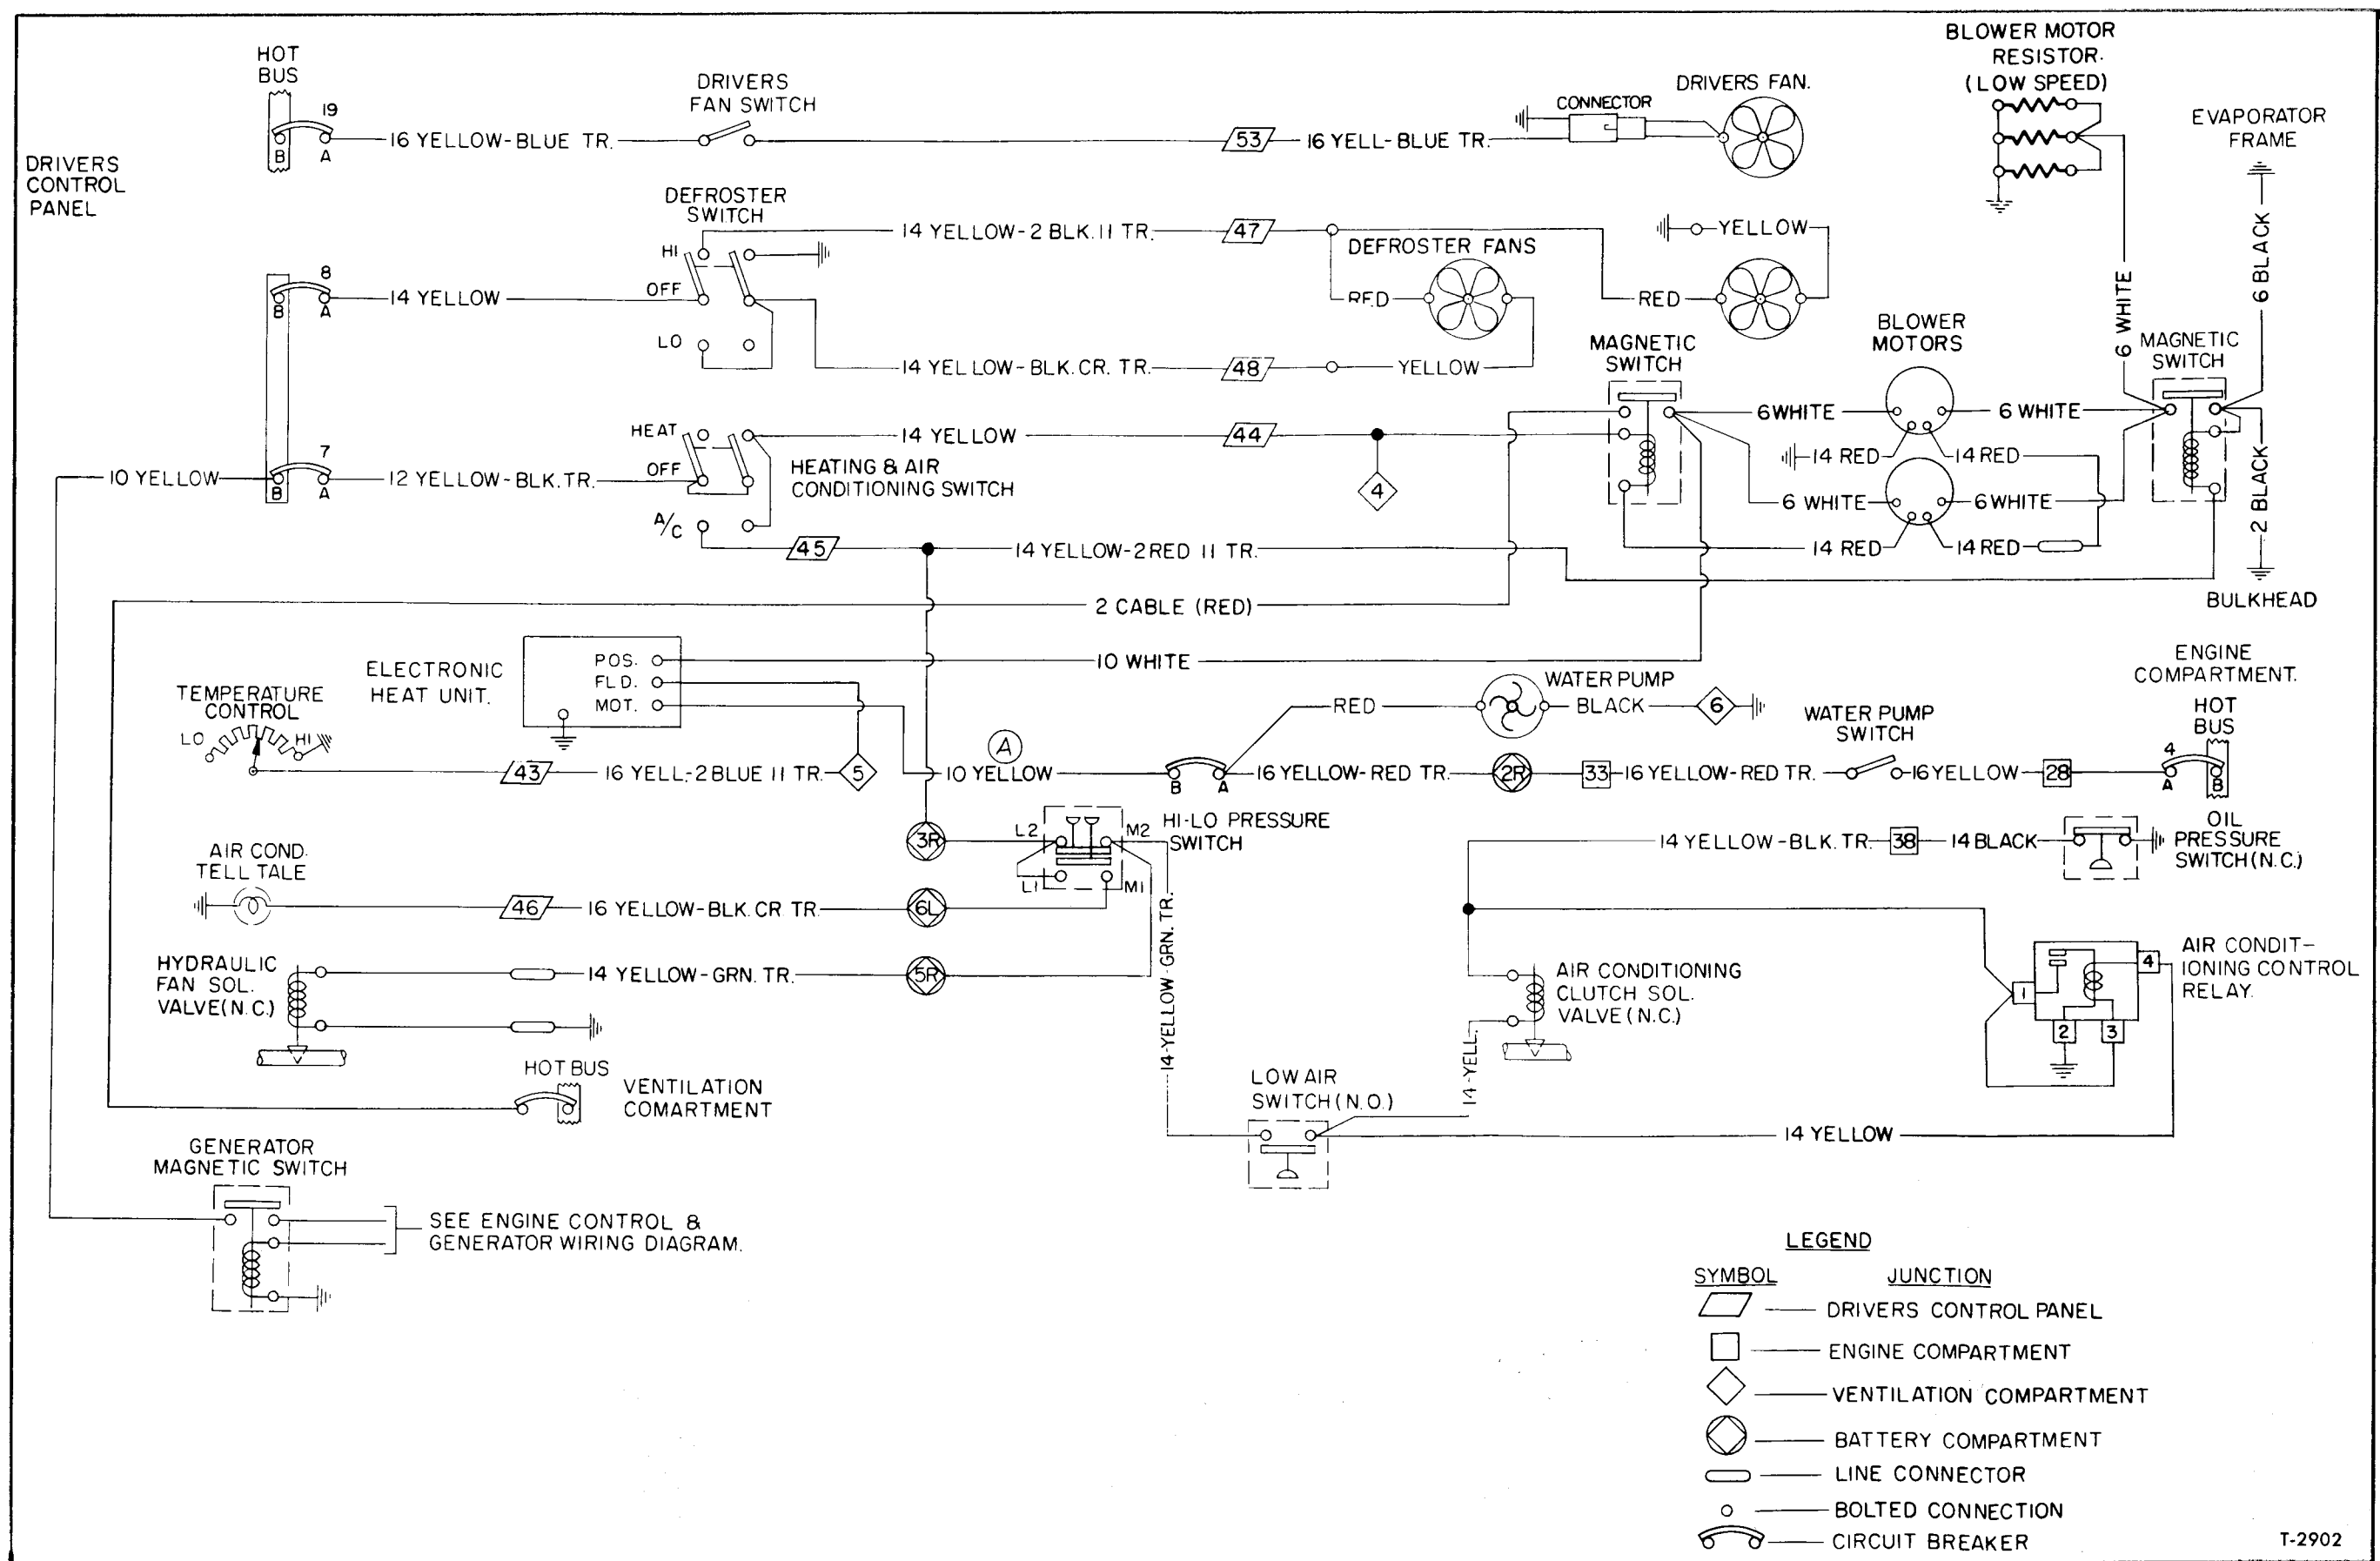

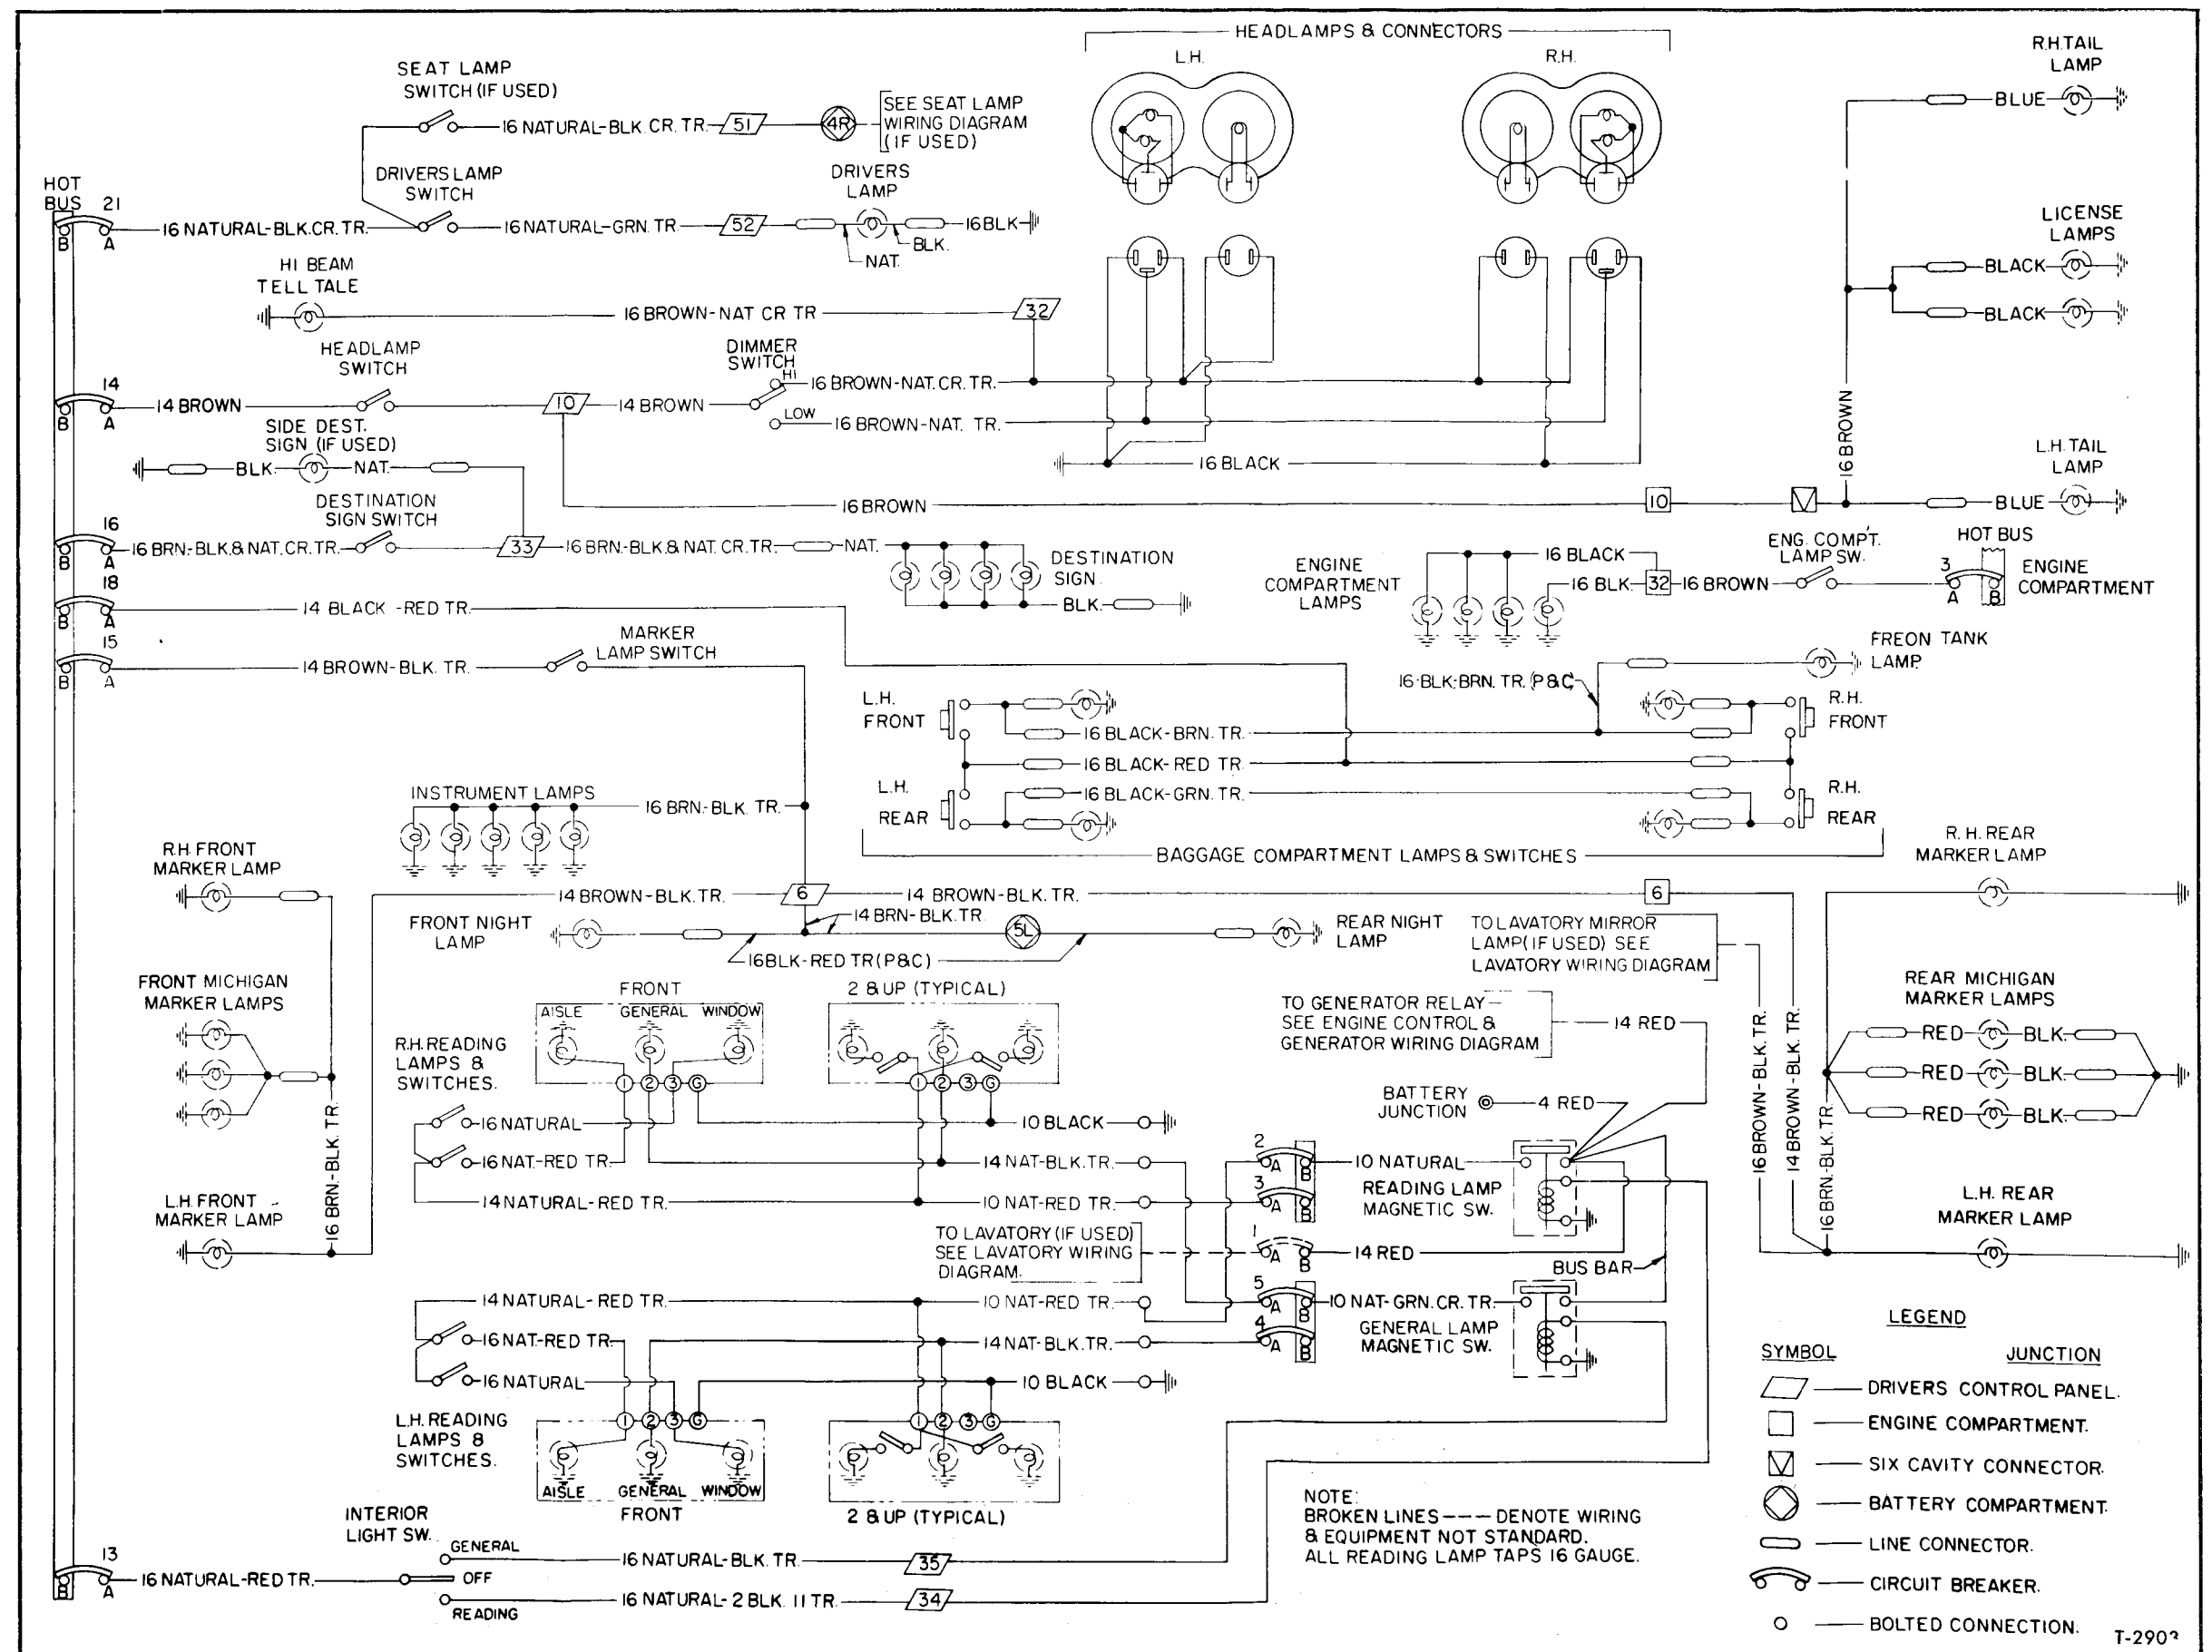


MD-98684A—Lighting System Wiring Diagram

ALARM SIGNAL

ENGINE CONTROL
GENERATOR

DIRECTIONAL LAMP

SPEEDOMETER

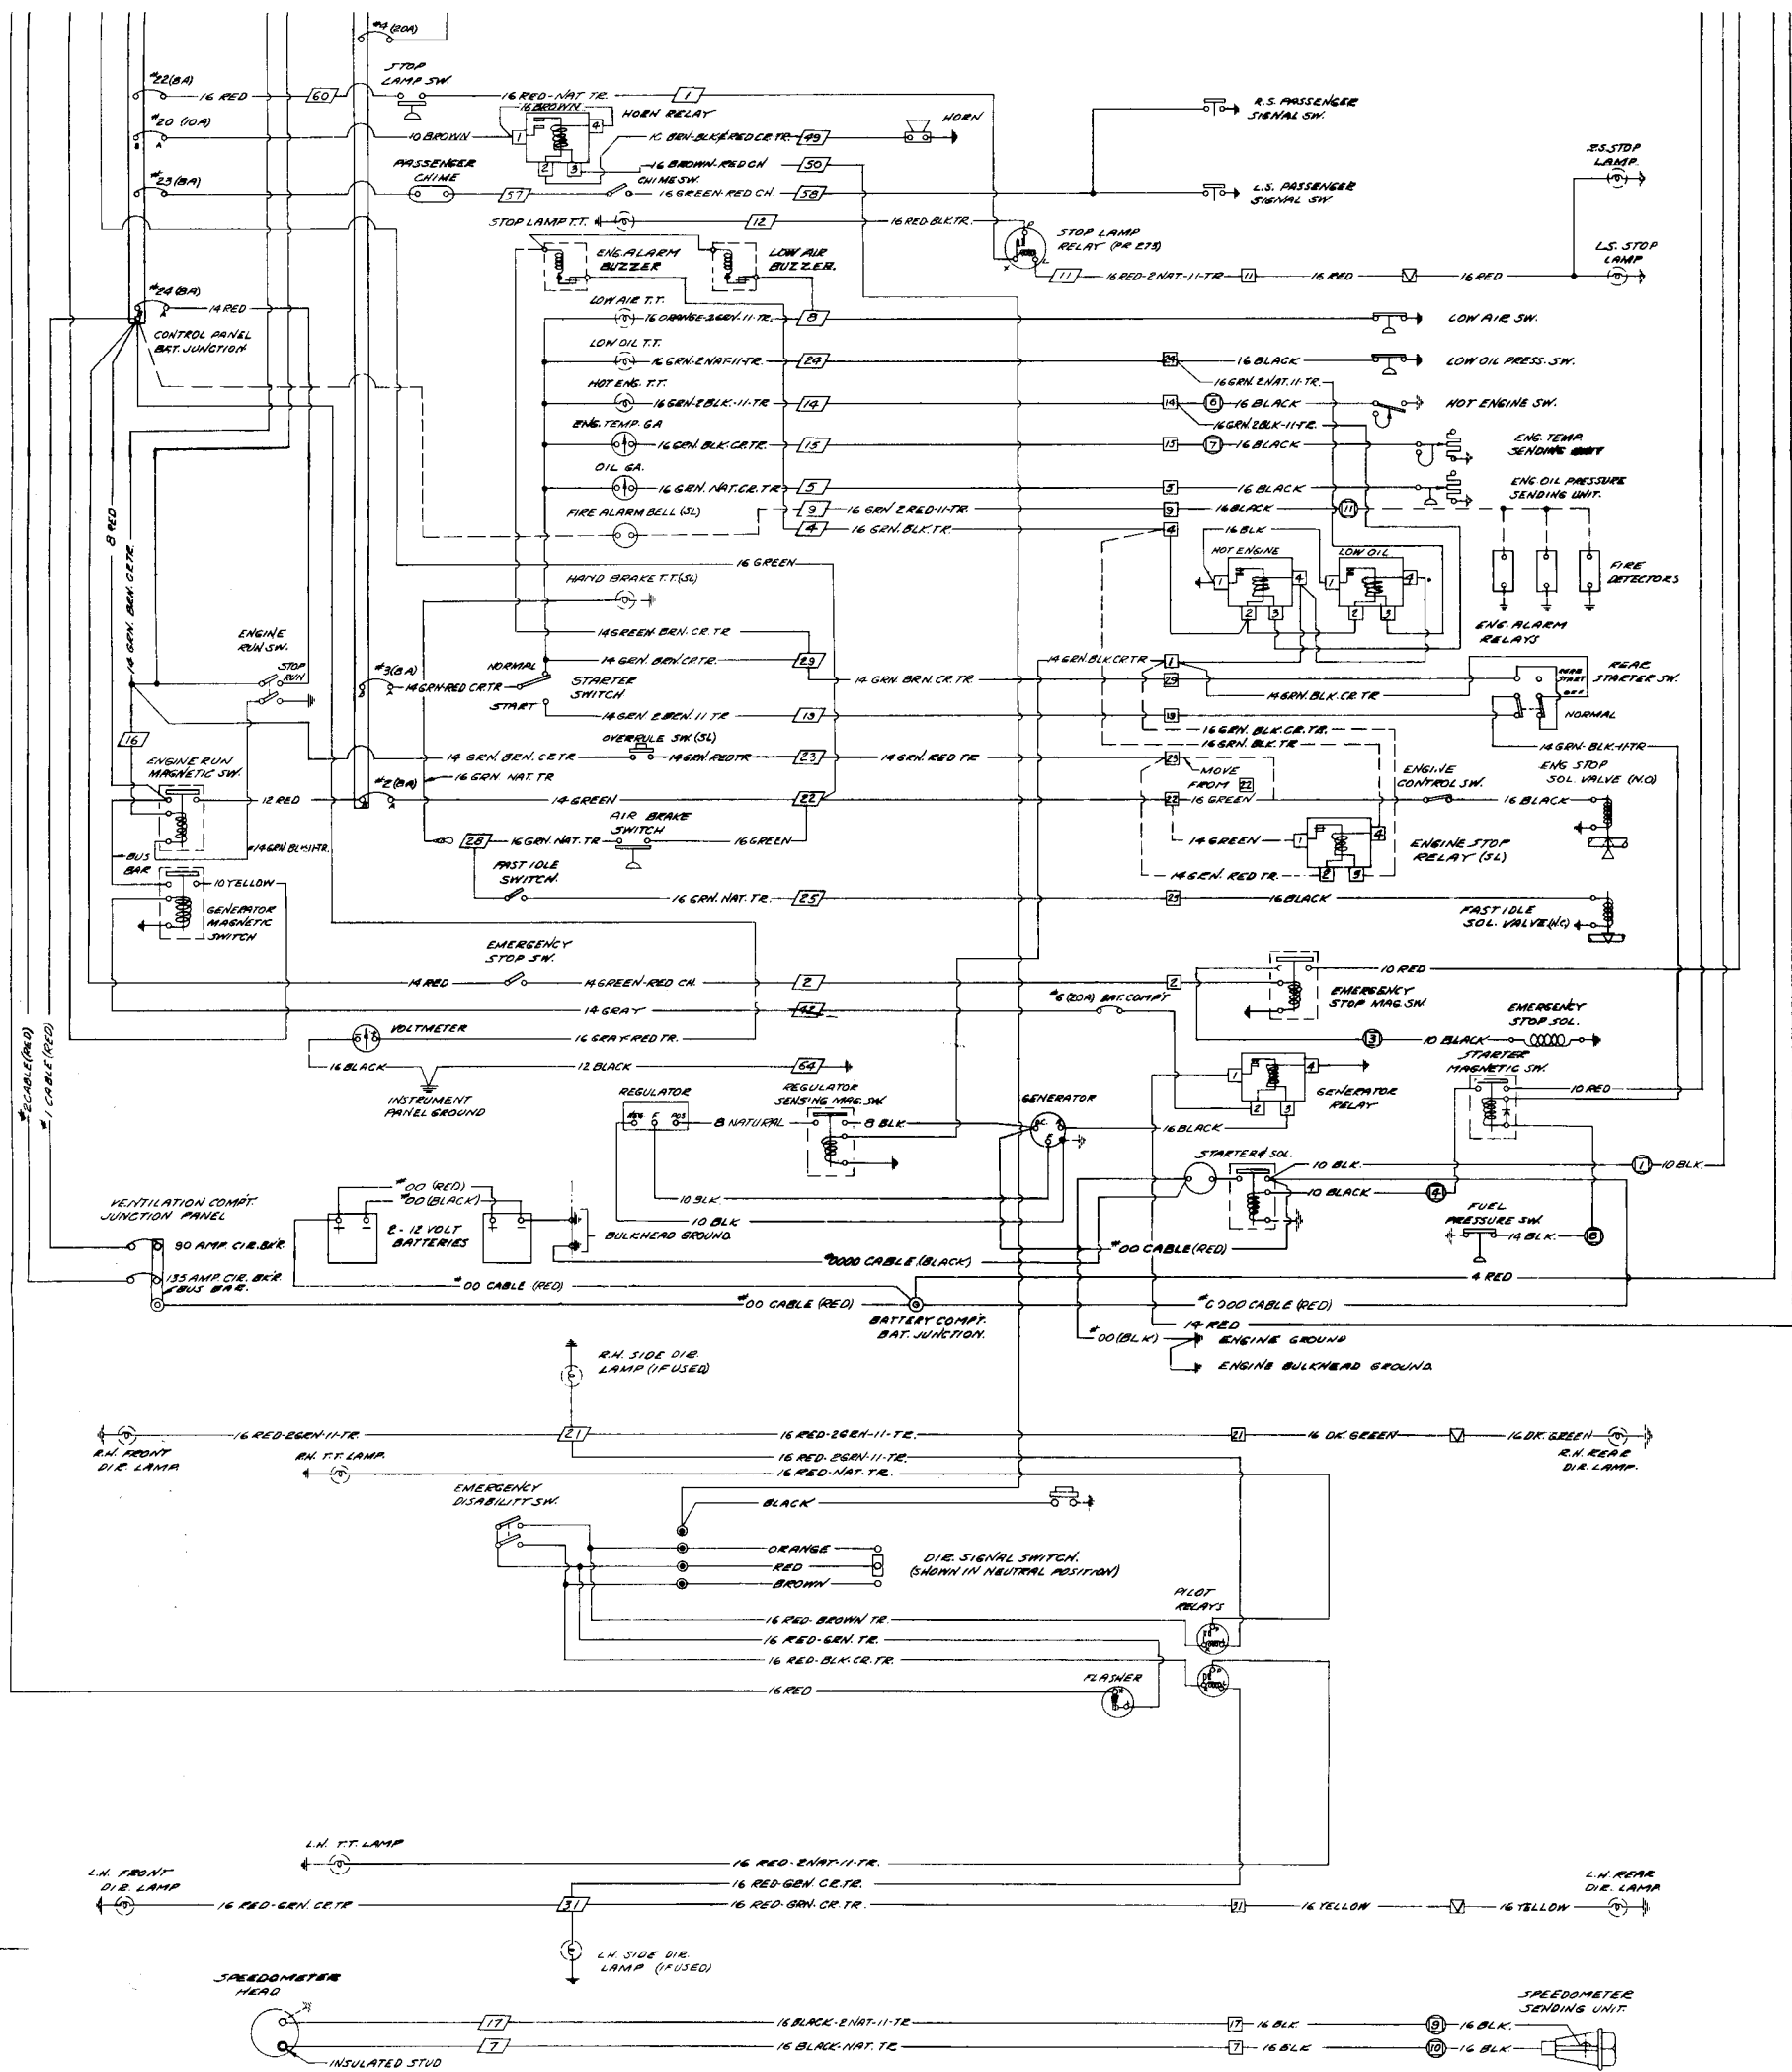

- LEGEND**
- SYMBOL
 - JUNCTION
 - DRIVERS CONTROL PANEL.
 - ENGINE COMPARTMENT.
 - VENTILATION COMPARTMENT
 - SIX CAVITY CONNECTOR (IN ENGINE COMPARTMENT)
 - ENGINE HARNESS CONNECTOR
 - BATTERY COMPARTMENT
 - DIRECTIONAL LAMP SWITCH
 - BROKEN LINES DENOTE WIRING NOT IN STANDARD WIRING HARNESS.

MASTER WIRING DIAGRAM
MODEL PD-4107 COACH

WINDSHIELD WIPERS

FLASHING
STEP LAMPS


LIGHTING


HEAT & A/C COND.


LAVATORY

TRANSMISSION

ALARM & SIGNAL

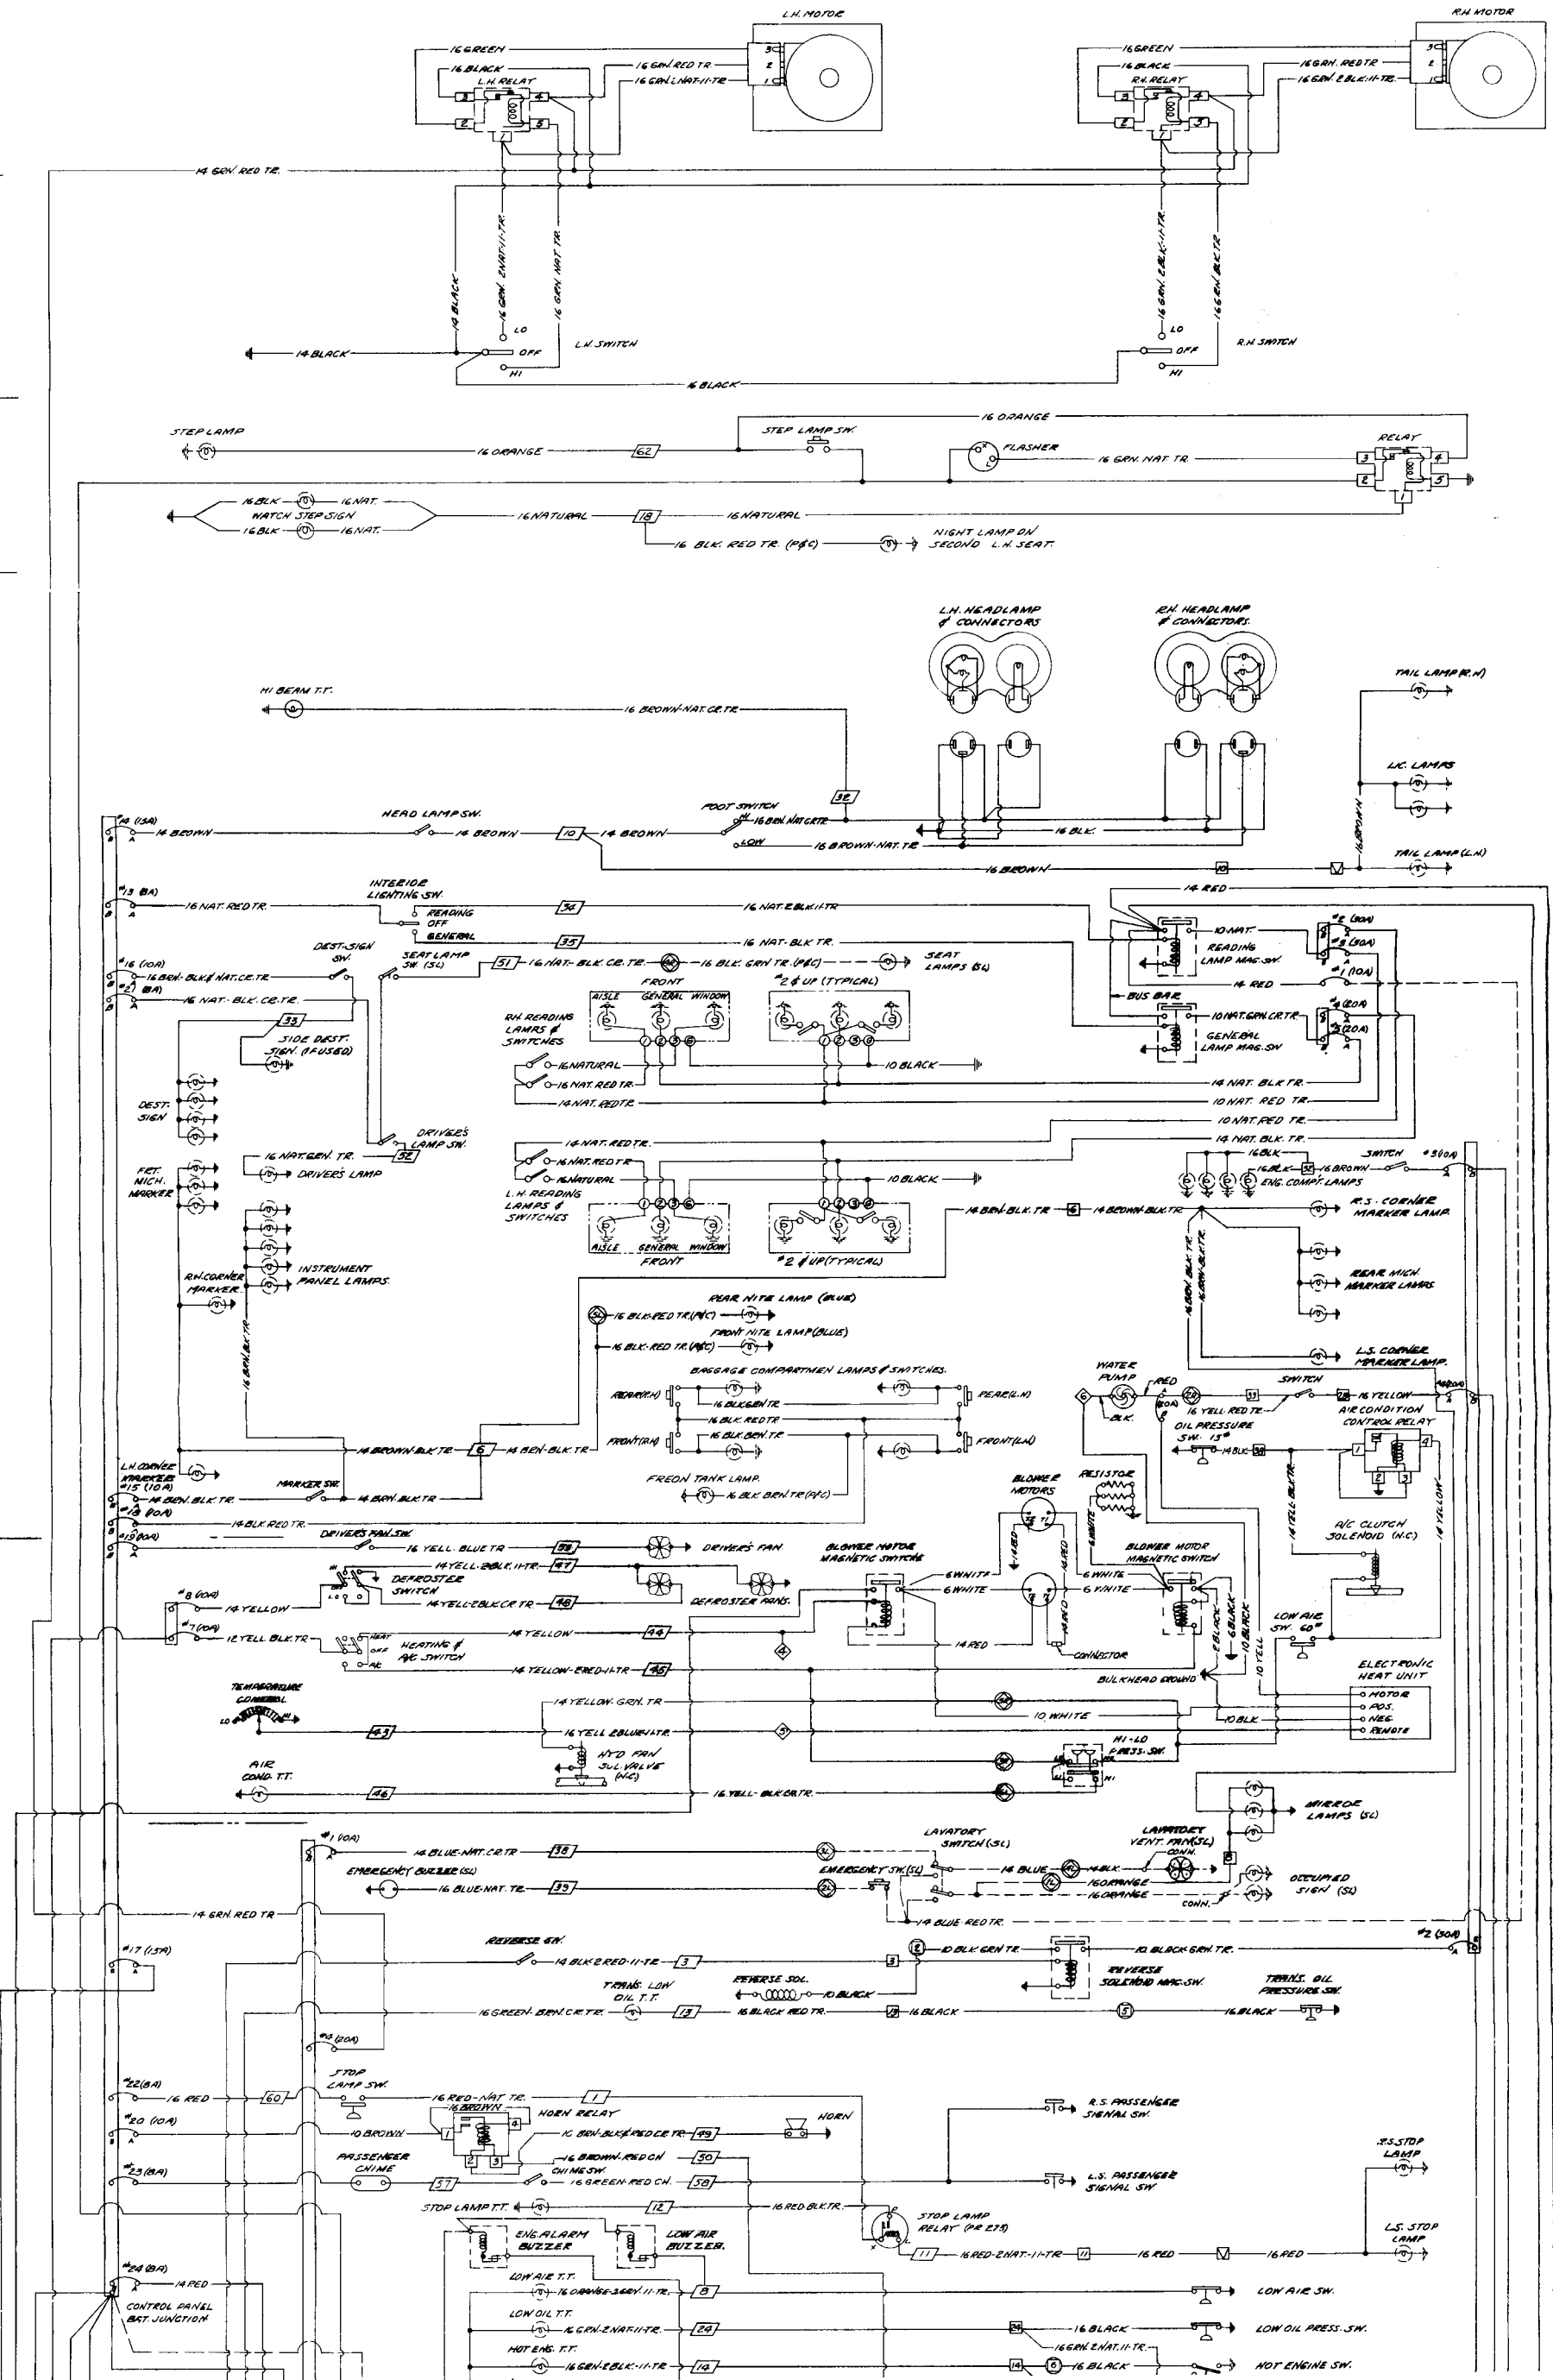

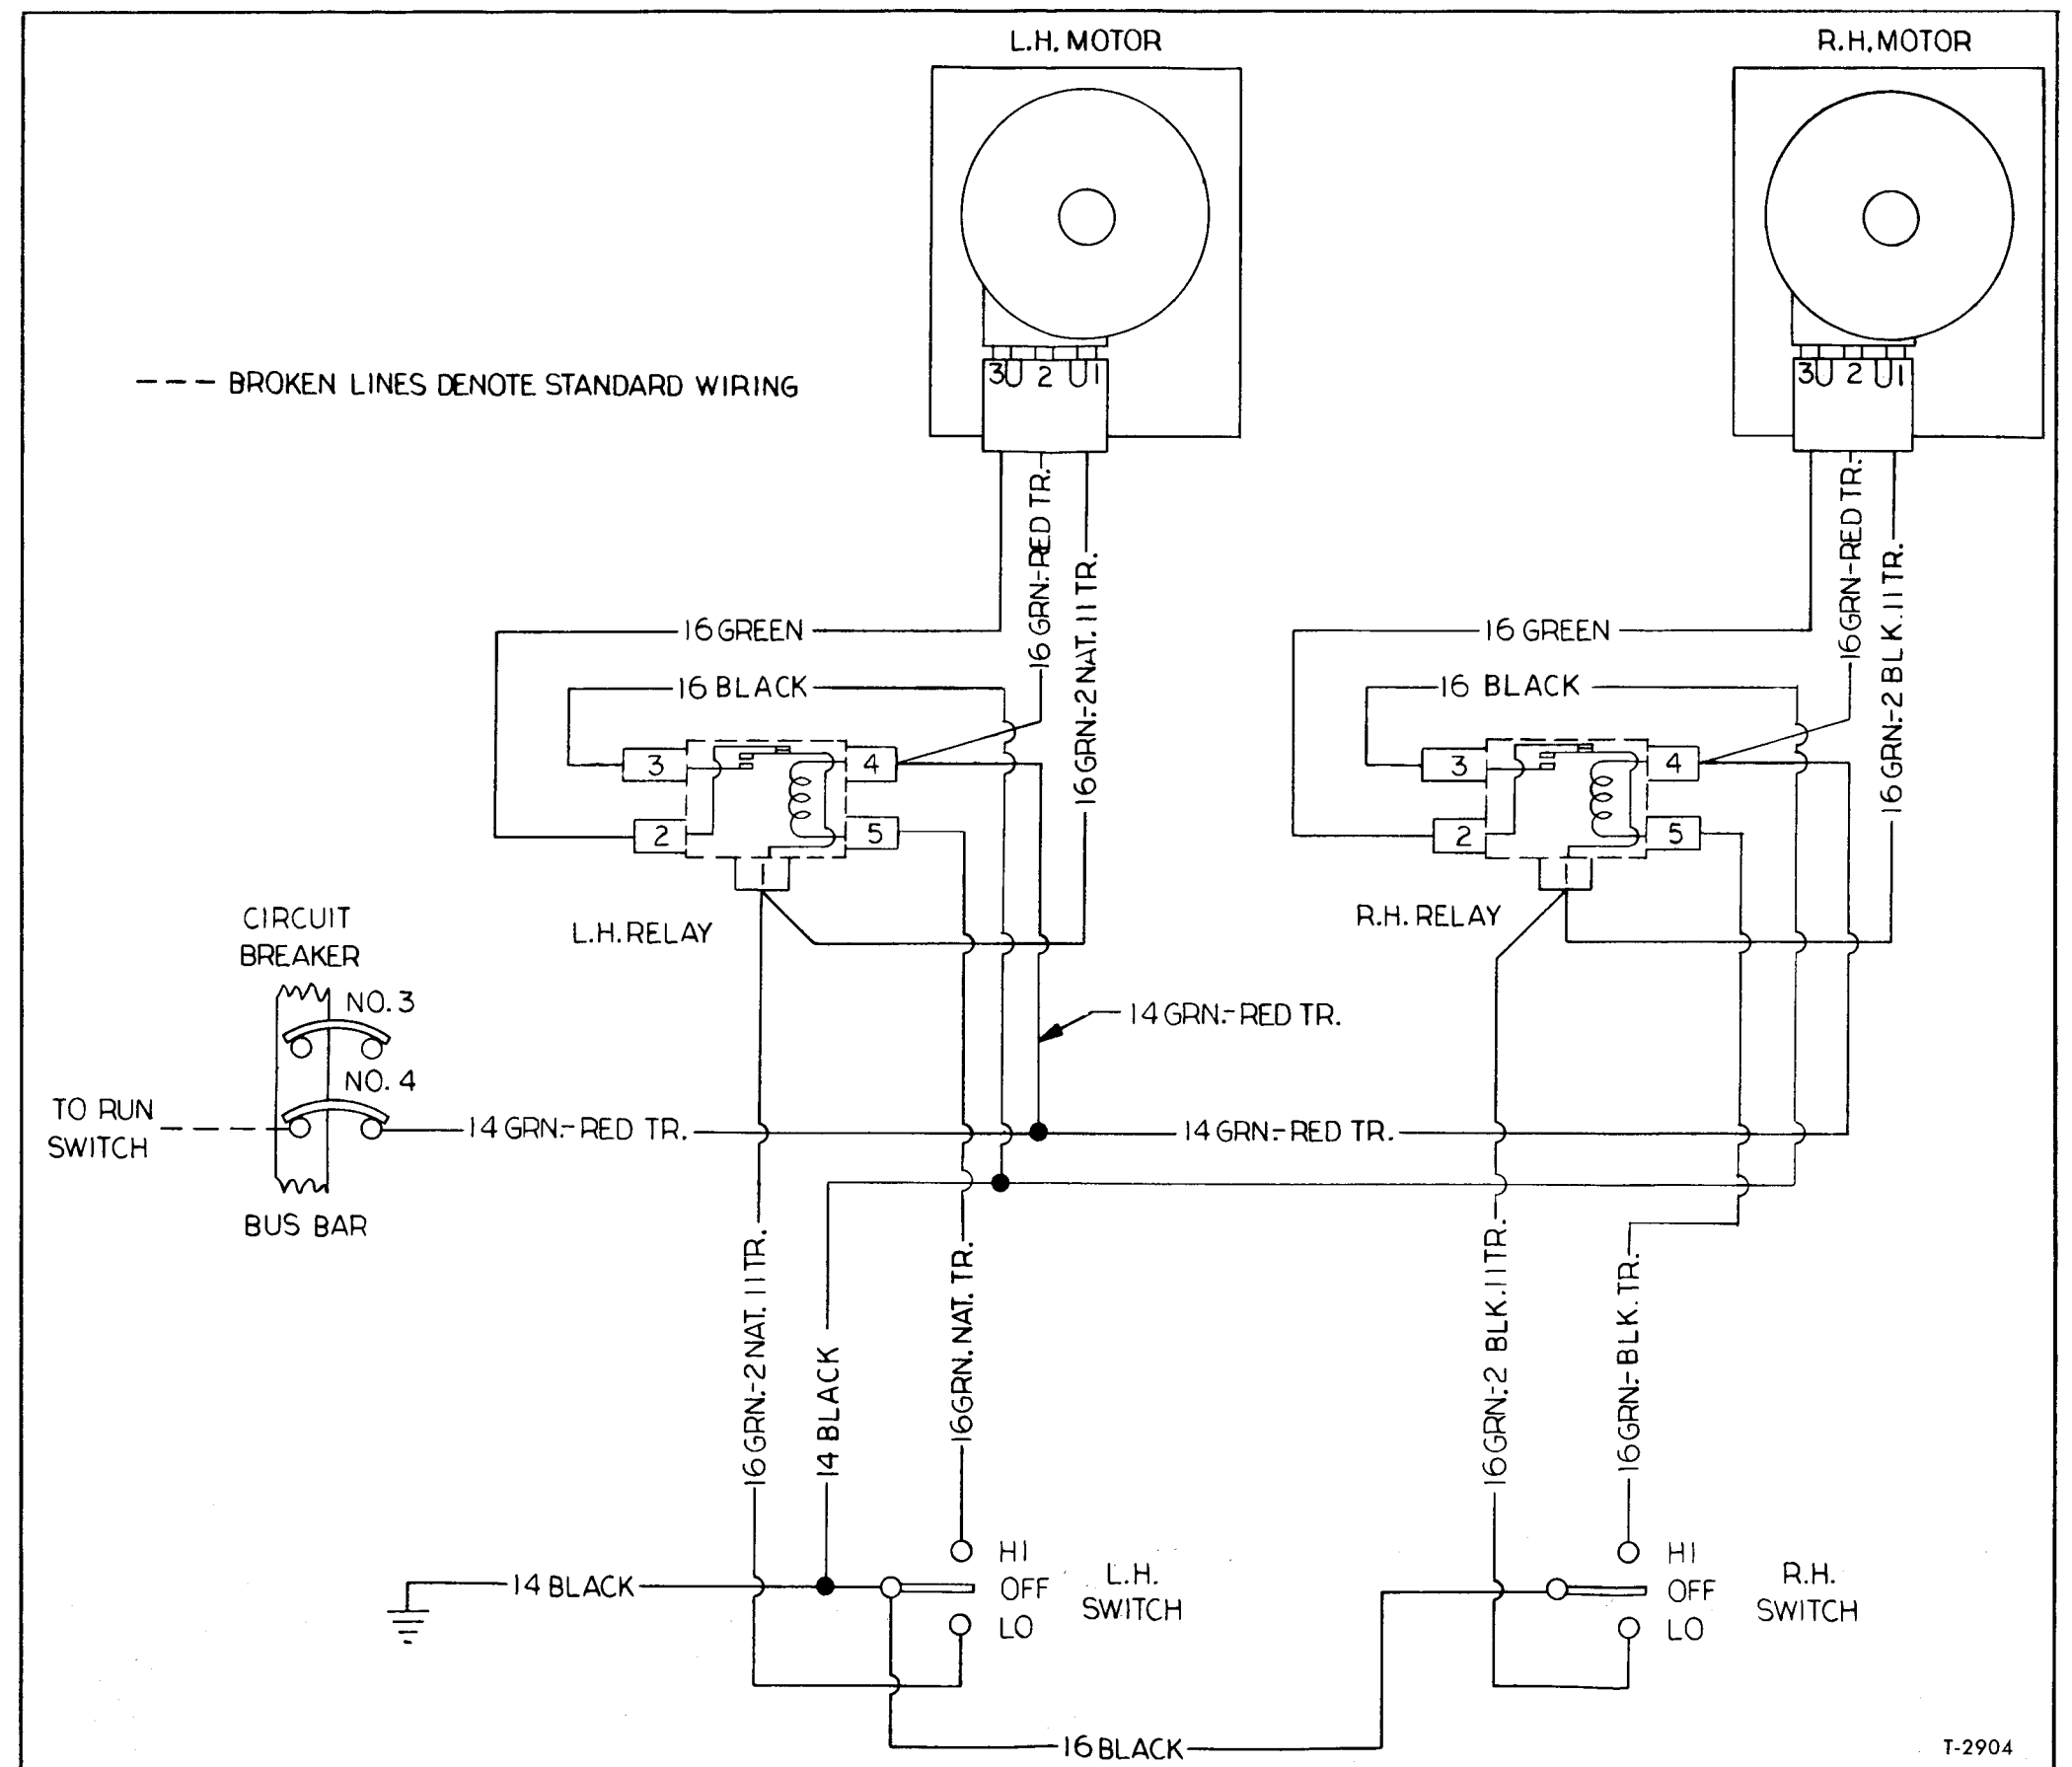

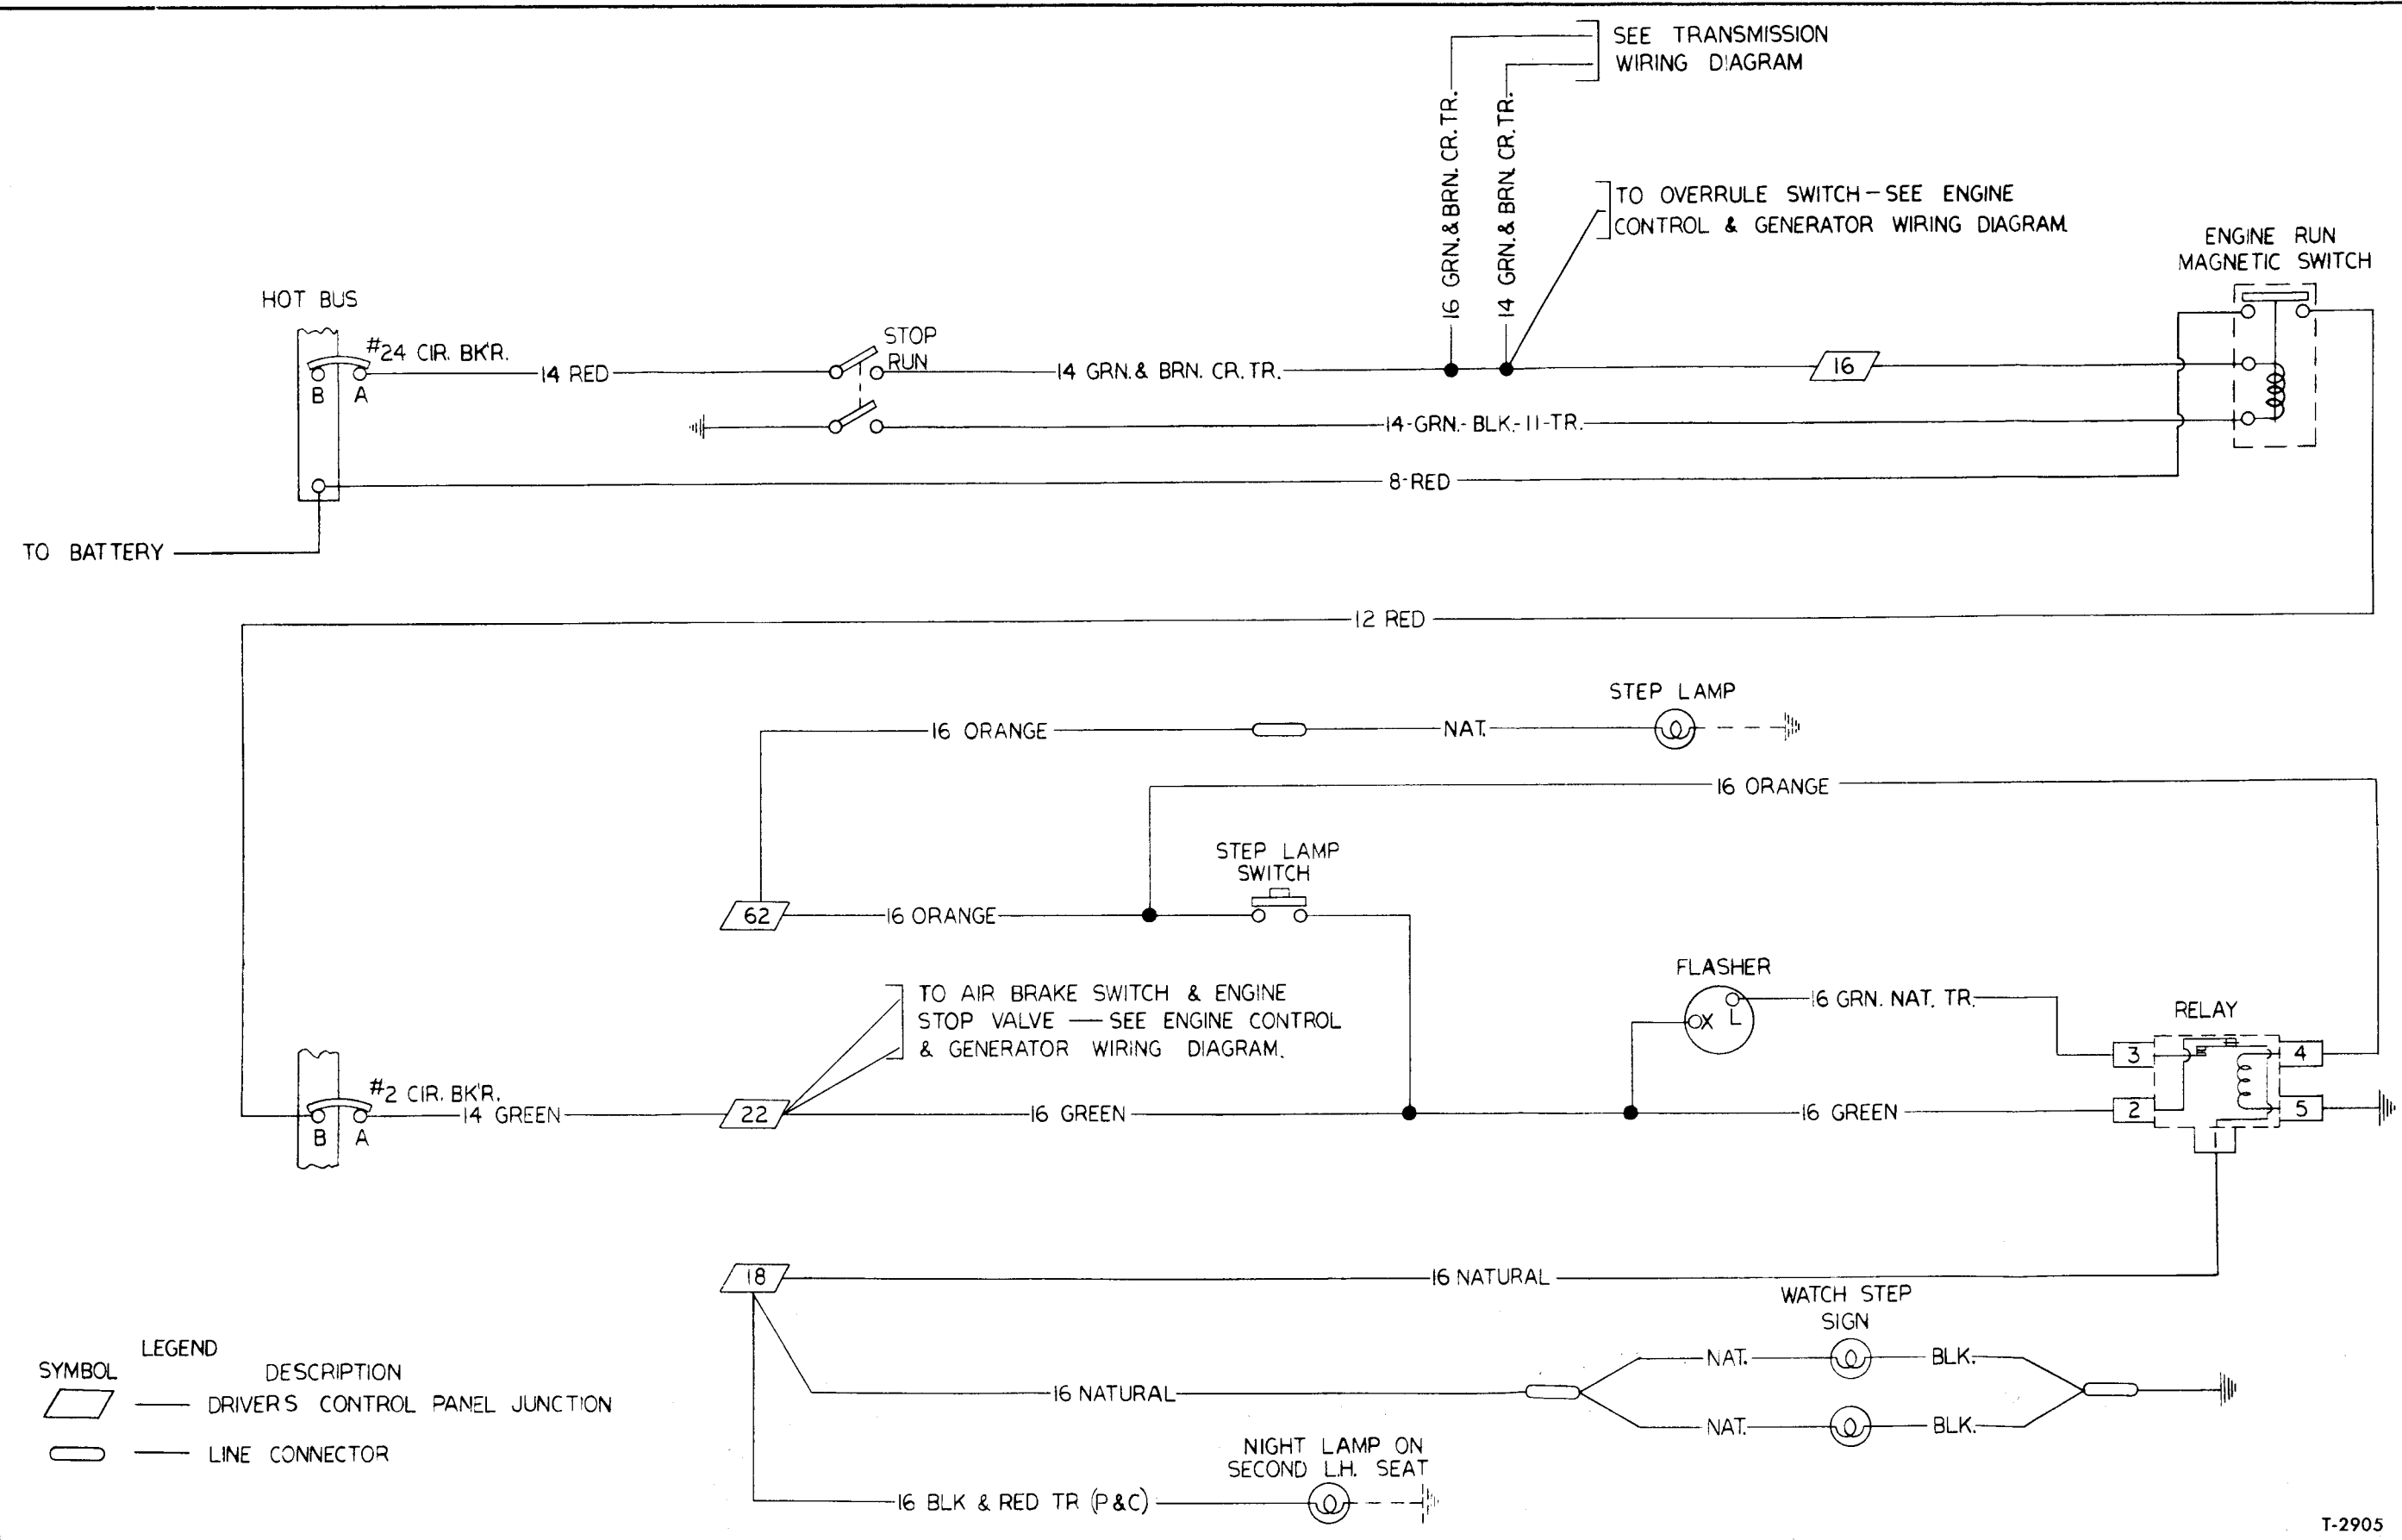

MD-99959—Flashing Step Lamp Wiring Diagram